

## Update Instructions

You will need LinkWare PC 10.2 in order to read Versiv 6.2 results. If you have a version of Linkware PC is that older than v9.5, please uninstall it first.

To Update LinkWare PC to version 10.2:

1. In File Explorer, double click on update-lw10.2-versiv6.2.zip in the folder you downloaded it to. This will show the contents on the zip file.
2. Double click on lw10.2\_bld4\_setup.exe.
3. Click on the button labeled "Run". There is no need to Extract the files.
4. Follow the instructions from the LinkWare PC install program.

To update your Versiv software to version 6.2:

1. Connect your Versiv to your PC using a USB cable.
2. Start LinkWare PC. If LinkWare PC prompts that there is a new version of Versiv software available, dismiss the prompt.
3. Click on the Software Update toolbar button on LinkWare PC.
4. Browse to the folder where update-lw10.2-versiv6.2.zip was downloaded.
5. Select the file in the browse dialog and click OK.
6. Wait until Versiv is done updating then connect your remote to the main to update the remote.  
Leave the USB cable attached until the Remote has finished updating and reboots.