

## A2000 **Multifunctional Power Meter**

3-348-980-03 15/8.06

- Measurement of current, voltage, active, reactive and apparent power, power factor, active and reactive energy, harmonic distortion and harmonics
- Precision measured values with error limits of 0.25% for U and I
- Depending upon model, capable of communications with Profibus-DP, LONWORKS interface or RS 485 interface with Modbus RTU and other protocols
- Front panel dimensions: 144 x 144 mm
- Minimal installation depth of less than 60 mm
- Good legibility thanks to the high contrast, 14 mm LED display
- Continuous recording of selected measured values for load profile and statistical purposes (optional)
- Interference recording function with high speed recording of events and pre-event history (optional)
- **Electrically isolated current inputs**
- Two limit value contacts which can be assigned as desired to measured values









#### **Applications**

The measuring instrument is used for the analysis of alternating current systems, in particular where conventional analog measuring instruments included in distribution systems no longer fulfill continuously growing demands. This is especially applicable where harmonic distortion and harmonics are crucial in addition to current, voltage and power.

As a further range of applications, the meter is also capable of eliminating combined use of measuring instruments which are operated simultaneously along with conventional recorders and fault indicators. In combination with current and voltage transformers, the instrument performs the most important measurements required in low and medium-voltage systems.

Analog outputs, limit values and interfaces are available for the monitoring and processing of measured values. A time curve is simultaneously recorded for up to 12 measured values in a failsafe system if the instrument version with integrated memory is utilized. Important measured values can be monitored continuously over a long period of time, or recording can be triggered for a specified duration by an event. In the case of event controlled recording, it is also possible to record the pre-history which lead up to the event at the same speed. This provides the user with a comprehensive overview of the pre-history which has resulted in an error. The instrument thus fulfills the function of a fault recorder significantly better than conventional paper chart recorders.

#### **Applicable Regulations and Standards**

IEC/EN 61010-1 / VDE 0411 Part 1	Safety requirements for electrical equipment for measurement, control and laboratory use
DIN 43864	Current interface for pulse transmission between impulse meters and tariff devices (for pulse output)
DIN EN 61 326 VDE 0843 Part 20	Electrical equipment for measurement, control and laboratory use – EMC requirements
IEC/EN 60529/VDE 0470 Part 1	Protection provided by enclosures (IP code)

#### **Function and Operational Principle**

The measuring instrument acquires instantaneous values for starconnected voltages and currents at three-phase electrical systems. If no neutral is available, the instrument automatically creates a virtual neutral point. The speed at which measured values are logged depends upon the respective line frequency. Each measured value is updated 32 times per period, which allows for the acquirement of measuring signals of up to the 15<sup>th</sup> harmonic.

After these values have been stored to memory, analysis and calculation of data such as delta and star-connected currents and voltages begin, as well as the determination of parameters for power, power factor, energy, harmonic distortion and harmonics. The values are calculated in accordance with DIN 40110 Part 1 and 2.

All calculated values are available to the display, the serial interface, the analog outputs and the limit value monitoring system.

### **Multifunctional Power Meter**

#### **Data Storage**

Up to 12 measured values can be selected for storage to memory. The measuring instrument acquires these measured values once every 300 ms and stores them first to intermediate memory. These values are then averaged in accordance with the selected sampling rate and are stored to permanent memory as mean values. The sampling rate is adjustable from 300 ms to max. 24 hours. Recording is triggered by means of internally selected limit values. The duration of the recording can be set within a range of 1 minute to 31 days. Several events can thus be stored to memory, one after the other. The trigger level which starts the recording can be set to either 0%, 25%, 50% or 75% for the duration of any given recording. This provides the user with an overview of the pre-history of the event which triggered recording, including time and date.

Continuous recording is also possible.

The memory has a capacity for up to 63,000 values. The maximum possible duration of a recording depends upon the number of recorded measured values (1 to 12), and the sampling rate at which they are to be recorded (0.3 s to 24 h).

The memory module is a buffered CMOS RAM. Data integrity is assured for at least 8 years.


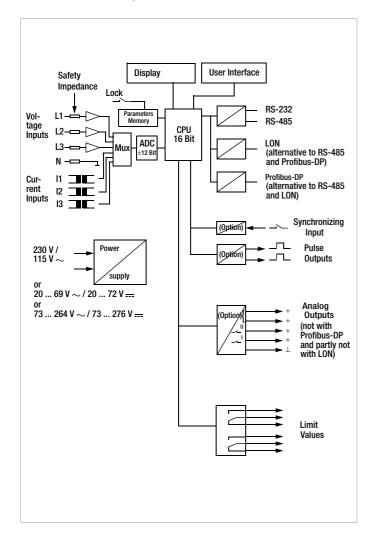



Fig. 1 Schematic Diagram

# Representation of Values for Power and Power Factor According to the Selected Parameters Configuration

dı n = calculation of reactive power per DIN 40110 without + or - sign

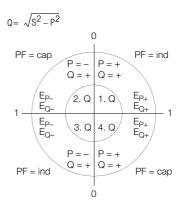

5. Ln= calculation of reactive power with + or - sign

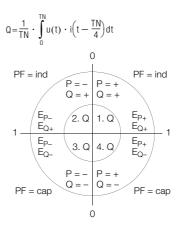

C□ΠP= compensating reactive power (reactive power is only produced if current and voltage have different + or - signs)

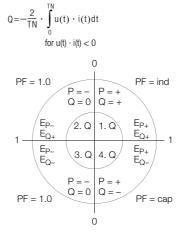


Fig. 2 Values for Power and Power Factor

## **Multifunctional Power Meter**

#### **Energy Display**

The instrument is equipped with eight energy meters for the display of energy values. The following energy values appear at these displays upon shipment from the factory:

- Active energy for phases 1, 2 and 3, as well as for the overall system
- Reactive energy for phases 1, 2 and 3, as well as for the overall system

The meters can be reconfigured to display the following energy values during instrument configuration:

high tariff, Active energy, import for the overall system Active energy, low tariff. import for the overall system Active energy, high tariff, export for the overall system Active energy, low tariff. export for the overall system Reactive energy, high tariff, import for the overall system Reactive energy, low tariff, import for the overall system Reactive energy, high tariff, export for the overall system Reactive energy, low tariff, export for the overall system

Switching from high to low tariff can be accomplished either by means of the synchronization input, an external contact or the data logger's internal clock (only possible if the instrument version with data logger is utilized).

#### **Harmonic Analysis**

Harmonic analysis is performed approximately once per second using the 32 averaged, sampled values per signal and mains period. FFT (fast Fourier transformation) provides components up to the 15<sup>th</sup> harmonic to this end. These are used to calculate the RMS values of the fundamental harmonic (HD 1) and the individual higher harmonics (HD 2 ... 15), as well as total harmonic distortion (THD). These effective values are displayed for the phase currents, and harmonic distortion is displayed for the phase voltages (RMS values with reference to the RMS value for the overall signal).

Due to the fact that the A2000 is not equipped with a special antialiasing filter, distortion in excess of the 17<sup>th</sup> order may influence measurement results for the higher harmonics.

#### **Serial Interfaces**

As standard equipment, the measuring instrument is provided with an RS 232 and an RS 485 interface. Both interfaces use the same protocol, which can be selected as desired.

The GMC device bus per DIN draft 19244, protocol per EN 60870 and Modbus RTU are available. A baud rate or 1200, 2400, 4800, 9600 or 19,200 can be selected. The address can be set within a range of 0 to 254, and parity can be set to even, odd, none or space.

Several measured values are always transmitted with one data word, allowing for especially fast transmission.

In the versions with LONWORKS interface the serial interface RS 485 has been dimensioned for the LONWORKS interface. No additional settings are required for LON.

In the versions with Profibus DP the serial interface RS 485 has been dimensioned for the Profibus DP. The selected address is valid for the RS 232, as well as for the Profibus DP. Addresses greater than or equal to 126 are interpreted as Profibus address

126, and can thus be used to allow for the assignment of an address to the instrument via the Profibus.

The selected baud rate only applies to the RS 232 interface for these instrument versions. The master determines transmission speed for the Profibus. The A2000 can be operated at the Profibus DP at transmission speeds of up to 12 mega-baud.

#### **LONWORKS Interface**

The power meters can be alternatively equipped with a LON interface. In this case, the LONWORKS interface replaces the RS 485. The RS 232 interface is still used for configuring parameters and for reading out the contents of the data memory. The optional data logger can be used with these instrument versions as well, in which case the read-out of recorded data is accomplished via the RS 232 interface.

#### Profibus DP

All measurement data, except for values stored to the data logger, can be read out via the bus link. Transmission speeds of up to 12 mega-baud are possible. The standard Profibus 9-pin plug is used to connect these measuring instruments to the Profibus DP.

#### **Programming**

The instrument can be programmed either with the keys at the front panel or via serial interface. All selected values remain in memory, even if mains failure should occur.

All programmed parameters, except for the limit values, can be protected against inadvertent change with a switch (*LOCK*) at the instrument's rear panel.

This assures that the instrument configuration is not changed during limit value selection.

Alternatively, the LOCK switch can be programmed to protect all parameters, including the limit values, against unauthorized modification

#### The following values can be set during programming:

#### Type of Electrical System

4-wire unbalanced load or

3-wire unbalanced load or

3-wire balanced load

The energy meters can be configured to display active and reactive energy for phases L1, L2 and L3, as well as for the overall system, or active and reactive energy for the overall system subdivided into energy import and export, and high and low tariff.

#### Inputs

Secondary Transformer Current 5 A or 1 A

Primary Transformer Current 1 A

5 A to 5000 A in 5 A steps to 50000 A in 50 A steps to 150000 A in 500 A steps

Secondary Transformer Voltage From 100 V to 500 V

in 1 V steps

Primary Transformer Voltage From 100 V to 100 kV

in 100 V steps

to 750 kV in 1 kV steps

# **Multifunctional Power Meter**

Time Period for		Type of Electrical System	
Mean Power Values	External via synchronizing input or internally adjustable from 1 to 60 minutes	Configuration	4-wire unbalanced (The energy meters display active and reactive energy for
Synchronizing Input	External, or operation with inter- nal mean value generation, adjustable from 1 to 60 minutes		phases L1, L2 and L3, as well as for the overall system.)
Synchronizing Input Function	Synchronization of mean values, tariff switching or external	Inputs	
	control of the limit values relays	Current	second. transformer current 5 A primary current same as secondary (= ratio 1:1)
Outputs		Voltage	secondary phase conductor
Limit Value Monitoring	<ul><li>Monitored measured values (sources)</li><li>Min-max characteristics</li><li>Hysteresis</li></ul>		voltage at the transformer 500 V primary phase conductor voltage same as secondary (= ratio 1:1)
	<ul><li>Alarm message storage, on/off</li><li>Limit value</li></ul>	Synchronizing Pulse	internal, mean value over 15 min.
2 or 4 Analog Outputs	<ul> <li>Measured values which influence the analog outputs</li> </ul>	Outputs	
	<ul> <li>Output range 4 20 mA,</li> </ul>	Limit Value 1	Measured value: I <sub>L1</sub> set to: 5 A
	0 20 mA, ± 20 mA, 0 10 V, 2 10 V or ± 10 V – Analog range with lower and upper rang values (indepen-		set to: 5 A  No hysteresis Relay closes when exceeded No storage of alarm messages
	dent of measuring range)	Limit Value 2	Measured value: U <sub>L1</sub>
Pulse Outputs for Active or Reactive Energy	<ul> <li>Export, Import</li> <li>Overall energy or energy from the individual phase conductors</li> </ul>		set to: 240 V No hysteresis Relay closes when exceeded No storage of alarm messages
	<ul><li>Active or reactive energy</li><li>Pulse rate:</li></ul>	Analog Output 1	Meas. value: Overall active power
	1 1000 pulses per kWh in steps of 1 1000 5000 pulses per kWh		Range: Import 0 2000 W Output Value: 4 20 mA
	in steps of 10	Analog Output 2	Meas. value: Overall reactive power
Serial Interfaces	The same pulse rates can be used for MWh as well.		Range: Import 0 1000 Var
Senai interfaces	Either GMC device bus, EN 60870 or Modbus RTU		Output Value: 4 20 mA
	protocol  Attention: RS 232 and RS 485	Analog Output 3 (optional)	Meas. value: I <sub>L2</sub> Range 0 5 A Output Value: 4 20 mA
	use the same protocol.	Analog Output 4 (optional)	Meas. value: U <sub>L2</sub> Range: 0 250 V
	Addresses with values ranging		Output Value: 4 20 mA
	from 0 to 254  Baud rate: 1200, 2400, 4800, 9600 or 19,200	Pulse Output 1 (optional)	Meas. value: overall system Active Energy Import 10 pulses per kWh
The measuring instrument is confi	Parity: even, odd, none or space	Pulse Output 2 (optional)	Meas. value: overall system Active Energy Export
parameters at the factory:	garoa wiai alo lollowilly		10 pulses per kWh
All parameters can be subsequ		Serial Interfaces	
The encoding switch for securing change is set at the factory to a	ng selected parameters against	Address	250
s. a. 190 to out at the factory to t		Baud Rate	9600 GMC dovice bus
		Protocol Parity	GMC device bus even

## **Multifunctional Power Meter**

#### **Characteristic Values**

#### **Measurement Inputs**

**Voltage Inputs** 

Phase – Phase 0 ... 500 ... 550 V, 40 ... 70 Hz Phase – N (ground) 0 ... 290 ... 320 V, 40 ... 70 Hz

 $\begin{array}{ll} \text{Overload} & \text{1.2-fold} \\ \text{Intrinsic Impedance} & \text{> 290 k} \Omega \\ \text{Power Consumption} & \text{< 1.1 W} \\ \end{array}$ 

**Current Inputs**  $0 ... \underline{1} ... 1.2 A, 0 ... \underline{5} ... 6 A$ 

Overload 1.4-fold cont.

 $30 \, \text{A} / 10 \, \text{s}, \, 100 \, \text{A} / 3 \, \text{s}$ 

Power Consumption < 150 mW

Sampling Rate 32 samples per period and measured value

Measuring Error NV = nominal value, MV = measured value

Current  $\pm (0.25 \% \text{ of NV} + 1 \text{ digit})$ for MV > 2 % of NV

 $\begin{array}{ll} \mbox{Voltage} & \pm \mbox{(0.25 \% of NV + 1 digit)} \\ \mbox{Power, Energy} & \pm \mbox{(0.5 \% of NV + 1 digit)} \\ \mbox{Power Factor} & \pm \mbox{0.02 for U, I > 10 \% of NV} \end{array}$ 

Frequency  $\pm 0.02 \text{ Hz}$ 

**4-Quadrant Operation** Measurement: import and export,

inductive and capacitive

Interfaces RS-232 and RS-485

alternatively: RS-232 and LON or RS-232 and Profibus-DP

Baud Rate 1200, 2400, 4800, 9600, 19200 baud

Parity even, odd, space, no

Protocol for

RS-232 and RS-485 selectable:

GMC device bus (DIN draft 19244),

EN 60870 or Modbus (RTU)

Synchronizing input

On short-circuited with R < 10  $\Omega$ Off open with R > 10 M $\Omega$ 

**Pulse Outputs** 

Contact open collector

Current ON 10 mA ... 27 mA

OFF < 2 mA

External Voltage 8 ... 30 V

Pulse Duration adjustable: 100 ms ... 800 ms

Interpulse Period ≥ 10 ms

**Analog Outputs** 

Output Quantity configurable

Current

Ranges  $0 - 20 \text{ mA}, 4 - 20 \text{ mA}, \pm 20 \text{ mA}$ 

Load max.  $500 \Omega$ 

Load Effect  $< 0.8 \ \mu\text{A} \ / \ \Omega \ (0 \ ... \ \underline{250} \ ... \ 500 \ \Omega)$ 

 $\begin{array}{ll} \mbox{Resolution} & 0.1\,\% \mbox{ of control range} \\ \mbox{Error Limit} & \pm\,0.5\,\% \mbox{ of final value} \end{array}$ 

Voltage

Ranges  $0 - 10 \text{ V}, 2 - 10 \text{ V}, \pm 10 \text{ V}$ 

Load < 20 mA

where control range = upper range limit – lower range limit, e.g. 1200 W = 1500 W – 300 W (freely selectable values)

**Relay Outputs** 

Switching Capacity  $\sim / = 250 \text{ V}, 2 \text{ A}, 500 \text{ VA} / 50 \text{ W}$ 

(nominal load)

Service Life > 500000 switching cycles

Display

Type 7-Segment LED

Display Color red Character Height 13.2 mm

Display Range

Internal Clock (only for version with data logger, LON or Profibus)

Accuracy < 2.5 s/day Power Supply lithium cell,

service life > 8 years

Power Supply

Supply Voltage

Feature H0 230 V / 115 V  $\sim \pm 10\%$ , 45 ... 65 Hz

Feature H1 20 ... 69 V  $\sim$  45...450 Hz

20 ... 72 V <del>...</del>

Feature H2 73 ... 264 V ~ 45...450 Hz

73 ... 276 V <del>...</del>

Feature H3  $20 \dots 27 \text{ V} \sim 45 \dots 450 \text{ Hz}$ 

20 ... 36 V <del>...</del>

Power Consumption max. 15 VA

The instrument is not equipped with an integrated circuit breaker. Therefore, during installation, care should be taken to ensure that

the building where the instrument is installed includes a circuit

breaker,

 the circuit breaker is positioned in close proximity to the instrument and is easily accessible to the operator,

it is clearly marked as a circuit breaking device for the instrument.

**Electrical Safety** 

**Variants** IEC 61010-1 / EN 61010-1

Protection Class

Measurement

Category inputs: III, relays: II

Contamination Level 2

Operating Voltage  $300 \text{ V} \sim / =$ 

Test Voltage measuring inputs: 3.7 kV **Protection** IEC 60529 / EN 60529

Front Panel IP 52 Housing IP 30 Terminals IP 20

Fuses

The supply circuit is protected by an internally soldered fuse.

 Feature H0
 T160mA/250V

 Feature H1
 T1A/250V

 Feature H2
 T250mA/250V

 Feature H3
 T1.25A/250V

**EMC** 

Interference Emission/

Interference Immunity IEC 61326 / EN 61326

**Ambient Conditions** 


Operating Temp.  $0 \dots 50 \,^{\circ}\text{C}$ Storage Temp.  $-25 \dots 70 \,^{\circ}\text{C}$ 

Relative Humidity 75%, no condensation allowed


## **Multifunctional Power Meter**

#### **Terminal Assignments**


#### **Current Inputs**

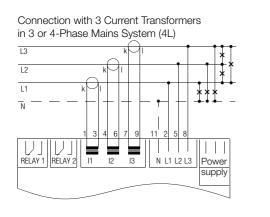


#### Connection with 2 Current Transformers in 3-Phase Mains System (3L)

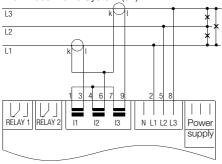

#### Connection with 1 Current Transformer in 4-Phase Mains System (identical load, $I_N = 0$ )

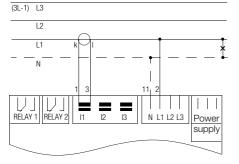


#### Connection with 1 Current Transformer in 3-Phase Mains System (identical load)

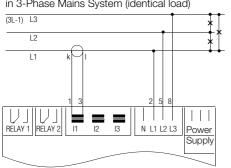


#### **Terminals**

Screw clamps for wires/cords up to 2.5 mm<sup>2</sup> and/or two-core wire-end ferrules for 2 x 1.0 mm<sup>2</sup>

#### Variants with RS 232 and RS 485 Serial Interface, or with LON and RS 232

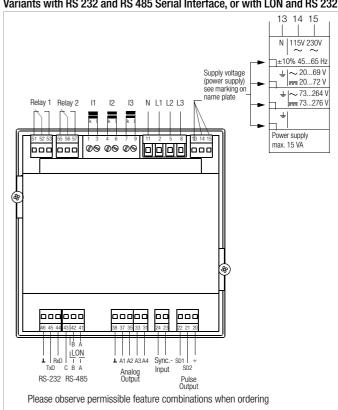

#### Design with Profibus-DP and RS-232 Serial Interface

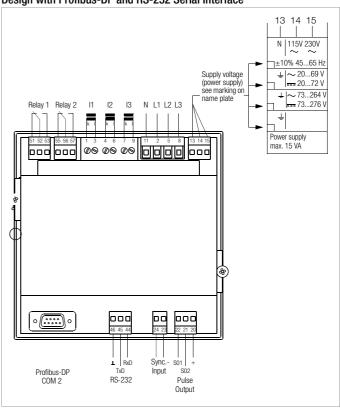

## **Multifunctional Power Meter**

#### **Mechanical Design**


Front dimensions 144 x 144 mm
Panel cutout 138 <sup>+1</sup> x 138 <sup>+1</sup> mm

Bezel height 8 mm
Installation depth 59.1 mm

Weight 1 kg (without packaging)
Mounting DIN screw clamps

Terminals Screw clamp terminal blocks

#### **Dimensional Drawing**

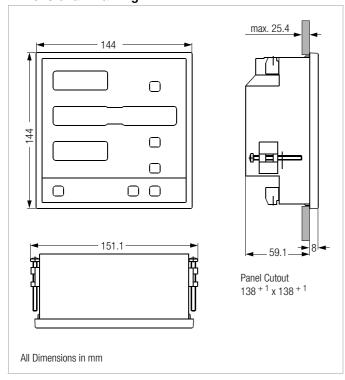

#### Standard Equipment

# Power meters without data memory (without optional data logger):

Measuring instruments without data logger are shipped with operating instructions in either German, English or French.

## Power meters with data memory (with optional data logger):

In addition to the measuring instrument and operating instructions, in either German, English or French, power meters with data logger also include a floppy disk with METRAwin<sup>®</sup> 10/A2000 software and an adapter with a subminiature plug (for connection to a PC via extension cable).

#### **Accessory Software**

#### METRAwin®10/A2000

Software for read-out and processing of measured values as they occur, or values from the data logger in the A2000 multifunctional power meter, and for configuring parameters at the A200.

This software runs under Windows 95/98/ME. Windows NT and

This software runs under Windows 95/98/ME, Windows NT and 2000

- Read-out of measured values from the power meter's data logger
- Continuous recording of measured values over a given period of time
- Display of measured values
  - as a function of time in line recorder format,
  - in tabular form,
  - digitally as individual values or
  - analog as bar graphs
- Freely selectable time intervals
- Identification of curves for the recognition of individual measured value sequences
- Simple, clear parameters configuration for the A2000
- Parameters configurations for frequently recurring setups can be saved to memory
- Measured values can be exported to other Windows programs
- Mathematical functions

#### **Software Description**

Data Acquisition and Display

METRAwin<sup>®</sup>10/A2000 provides for an unambiguous display of the contents of the data memory from the A2000. Alternatively, measured values can be continuously queried from the measuring instrument by the software, and stored to a data file.

METRAwin<sup>®</sup> 10/A2000 summarizes values from the data logger or online recorded values in tabular form, and documents minimum and maximum values with date and time as well.

All measured values can be plainly represented as a function of time with a y-t graph. The time scale can be expanded or contracted to allow for optimal representation. The cursor can be placed at the corresponding position within the time scale for precision readings.

Measured values can also be displayed digitally. Up to four measured values can be displayed at the monitor simultaneously in digital form.

Instrument Configuration with METRAwin®10/A2000 METRAwin®10/A2000 plainly displays all of the functions and possible settings included in the power meter in various windows. The desired parameter values are entered to the corresponding fields and are subsequently uploaded to the power meter.

## **Multifunctional Power Meter**

#### **Order Information**

Designation		Configuration Options Article Number / Feature		
A2000 Multifunctional Power Meter		A2000	A2000	A2000
Serial Interface	with RS-232 and RS-485	LO	_	-
	with LON and RS-232	_	L1	_
	with Profibus-DP and RS-232	_	_	L2
Analog Outputs	2 analog outputs	A0	A0	-
	4 analog outputs	A1 <sup>1)</sup>	_	_
	without analog output	_	_	A2
Data Logger	without data logger	R0	R0	R0
	with data logger	R1 <sup>1) 2)</sup>	R1 <sup>1)</sup>	R1 <sup>1)</sup>
Pulse Output / Synchronizing Input	without pulse output and without synchronizing input	P0	_	P0
	2 pulse outputs and 1 synchronizing input	P1	P1	P1
Supply Voltage	230 / 115 V ~	H0	H0	H0
	20 69 V ∼ / 20 72 V <del></del>	H1	H1	H1
	73 264 V ∼ / 73 276 V <del></del>	H2	H2	H2
	20 27 V ∼ / 20 36 V <del></del>	Н3	H3	Н3
Manufacturer's Certificate /	without certificate	U0	U0	U0
Test Report	with certificate and test report	U1	U1	U1
Operating Instructions	in print: German and English / on CD-ROM: German, English, French, Spanish and Italian			
Interface Description	on CD-ROM: German, English			
Software	METRAwin <sup>®</sup> 10/A2000: on CD-ROM			

<sup>1)</sup> only in combination with Feature P1

#### A2000 Mobile Set

Designation	Feature Combination	Article Number	
A2000 Mobile Set	A2000 H0 A0P1R1L0U0	A202A	

#### Accessories for A2000 and A2000 Mobile Set

Designation	
Adapter (Screw clamp A2000 on 9-pin sub-D for PC) with METRAwin®10/A2000 (software for transmission of meas. values and instrument configuration)	
Interface cable RS-232, approx. 2 m long	GTZ3241000R0001

#### **Standard Units**

The following measuring instruments can be shipped as standard units. Only the article number needs to be indicated.

Designation		Instrument and Features Combination	Article Number
A2000	with 230 V / 115 V $\sim$ supply voltage, with 2 analog outputs, with RS-232 and RS-485 interfaces, with operating instructions, interface descriptions and software	A2000 H0 A0 P0 R0 L0 U0	A2000-V001
A2000	with 230 V / 115 V $\sim$ supply voltage, with 4 analog outputs, with 2 pulse outputs and 1 synchronizing input, with RS-232 and RS-485 interfaces, with operating instructions, interface descriptions and software	A2000 H0 A1 P1 R0 L0 U0	A2000-V002
A2000	with 230 V / 115 V $\sim$ supply voltage, with 4 analog outputs, with 2 pulse outputs and 1 synchronizing input, with data logger, with RS-232 and RS-485 interfaces, with operating instructions, interface descriptions and software	A2000 H0 A1 P1 R1 L0 U0	A2000-V003
A2000	with 230 V / 115 V $\sim$ supply voltage, with 2 analog outputs, with 2 pulse outputs and 1 synchronizing input, with LON and RS-232 interfaces, with operating instructions, interface descriptions and software	A2000 H0 A0 P1 R0 L1 U0	A2000-V004
A2000	with 230 V / 115 V $\sim$ supply voltage, with 2 pulse outputs and 1 synchronizing input, with Profibus-DP and RS-232, with operating instructions, interface descriptions and software	A2000 H0 A2 P1 R0 L2 U0	A2000-V005

Edited in Germany ullet Subject to change without notice ullet A pdf version is available on the internet



<sup>&</sup>lt;sup>2)</sup> only in combination with Feature A1