

The gauges must not be used for measuring flammable or combustible gases which react in air.

They can be operated in connection with an INFICON controller or with another controller.

Trademarks

VCR® Swagelok Marketing Co.

Safety

Symbols Used

DANGER
Information on preventing any kind of physical injury.

WARNING
Information on preventing extensive equipment and environmental damage.

Caution
Information on correct handling or use. Disregard can lead to malfunctions or minor equipment damage.

Personnel Qualifications

Skilled personnel
All work described in this document may only be carried out by persons who have suitable technical training and the necessary experience or who have been instructed by the end-user of the product.

General Safety Instructions

- Adhere to the applicable regulations and take the necessary precautions for the process media used. Consider possible reactions between the materials and the process media. Consider possible reactions (e.g. explosion) of the process media due to the heat generated by the product.
- Adhere to the applicable regulations and take the necessary precautions for all work you are going to do and consider the safety instructions in this document.
- Before beginning to work, find out whether any vacuum components are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

Communicate the safety instructions to all other users.

Liability and Warranty

INFICON assumes no liability and the warranty becomes null and void if the end-user or third parties

- disregard the information in this document
- use the product in a non-conforming manner
- make any kind of interventions (modifications, alterations etc.) on the product
- use the product with accessories not listed in the product documentation.

The end-user assumes the responsibility in conjunction with the process media used.

Gauge failures due to contamination, as well as expendable parts (filament), are not covered by the warranty.

Technical Data

Measurement principle	thermal conductance according to Pirani
Measurement range (air, O ₂ , CO, N ₂)	5 × 10 ⁻⁴ ... 1000 mbar
Accuracy (N ₂)	
1 × 10 ⁻³ ... 100 mbar	±15% of reading
5 × 10 ⁻⁴ ... 1 × 10 ⁻³ mbar	±50% of reading
100 ... 1000 mbar	±50% of reading
Resolution	1% of reading
Repeatability	
1 × 10 ⁻³ ... 100 mbar	2% of reading

Output signal (measurement signal)			
Voltage range	VDC	0 ... +10.3	
Measurement range	VDC	+1.9 ... +10.0	
Voltage vs. pressure		logarithmic	1.286 V/decade
Error signal	V	0 ... +0.5 (filament rupture)	

Output impedance	Ω	2 × 4,7
Minimum loaded impedance	kΩ	10, short-circuit proof
Response time	ms	80

Gauge identification	27.0 kΩ, referenced to supply common (voltage at pin 4 ≤ 5 V)
----------------------	---

Adjustment	one tactile switch for ATM and HV adjustment
------------	--

Switching functions	SP1, SP2
Threshold value indication and setting	one tactile switch at measurement value output. Press briefly for threshold indication. Keep pressing or press repeatedly for threshold setting.
Setting range	2 × 10 ⁻³ ... 500 mbar
Hysteresis	10% above lower threshold
Relay contact closed open	30 V, 0.5 ADC, floating at low pressure (lamp is lit) at high pressure, error, missing supply

DANGER
The gauge may only be connected to power supplies, instruments or control devices that conform to the requirements of a grounded extra-low voltage (SELV-E according to EN 61010). The connection to the gauge has to be fused¹⁾.

Supply voltage			
At gauge	VDC	+14 ... +30	
Ripple	V _{pp}	≤ 1	
Current consumption	mA	< 500 (max. starting current)	
Power consumption	W	≤ 1	
Fuse required ¹⁾	AT	1 (slow)	

Electrical connection	FCC 68 / RJ45 appliance connector, 8 poles, male
Sensor cable	8 poles plus shielding
Cable length	≤ 100 m (8 × 0.14 mm ²)

Grounding concept	→ "Electrical Connection"
Vacuum connection to signal common	connected via 1 MΩ (voltage difference < 15 V)
Supply common to signal common	conducted separately, for differential measurement

Materials exposed to vacuum			
PSG500/-S, PSG502-S	DIN 1.4301, DIN 1.4305, DIN 1.4435, glass, Ni, NiFe		
PSG510-S, PSG512-S	Al ₂ O ₃ (ceramics), Ni, DIN 1.4435, DIN 1.4305, DIN 1.3981		

Filament			
PSG500/-S, PSG510-S	W		
PSG502-S, PSG512-S	Ni		


Internal volume			
DN 16 ISO-KF	cm ³	≈ 1.5	
DN 16 CF-R	cm ³	≈ 1.5	
1/8" NPT	cm ³	≈ 2	
8 VCR®	cm ³	≈ 2	
4 VCR®	cm ³	≈ 2	
1/2"-Rohr	cm ³	≈ 2	
7/16-20 UNF	cm ³	≈ 1.5	
DN 16 ISO-KF long tube	cm ³	≈ 10	
DN 16 CF-R long tube	cm ³	≈ 10	
Admissible pressure (abs.)	bar	10, limited to inert gases	

Admissible temperatures			
Operation	°C	+5 ... +60	
Vacuum connection			
DN 16 ISO-KF	°C	80 ²⁾	} in horizontal mounting orientation
DN 16 CF-R	°C	80 ²⁾	
1/8" NPT	°C	80	
8 VCR®	°C	80	
4 VCR®	°C	80	
1/2"-Rohr	°C	80	
7/16-20 UNF	°C	80	
Filament	°C	110	
Storage	°C	-20 ... +65	

Relative humidity	%	≤ 80 at temperatures up to ≤ 31 °C, decreasing to 50 at +40 °C
-------------------	---	--


Use	indoors only, altitude up to 2000 m NN
-----	--

Mounting orientation	any
Protection category	IP40

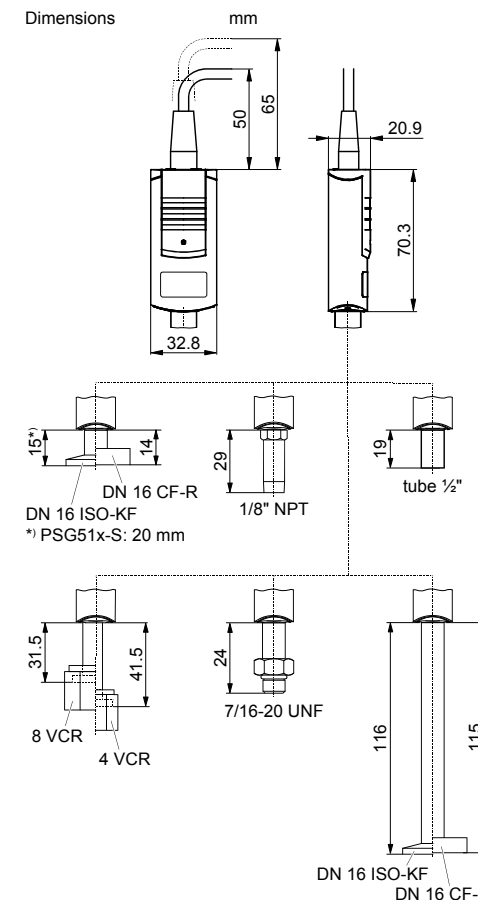

Weight			
DN 16 ISO-KF	g	80	
DN 16 CF-R	g	100	
1/8" NPT	g	70	
8 VCR®	g	130	
4 VCR®	g	100	
1/2"-Rohr	g	70	
7/16-20 UNF	g	80	
DN 16 ISO-KF long tube	g	130	
DN 16 CF-R long tube	g	140	

Measurement Signal vs. Pressure

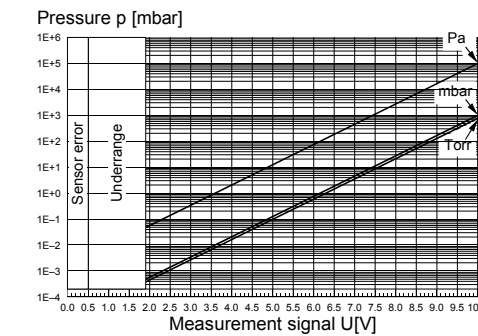


$$p = 10^{((U-c)/1.286)} \Leftrightarrow U = c + 1.286 \times \log_{10} p$$

valid in the range 5 × 10⁻⁴ mbar < p < 1000 mbar
3.75 × 10⁻⁴ Torr < p < 750 Torr
5 × 10⁻² Pa < p < 1 × 10⁵ Pa

U	p	c	U	p	c
[V]	[mbar]	6.143	[V]	[micron]	2.448
[V]	[µbar]	2.287	[V]	[Pa]	3.572
[V]	[Torr]	6.304	[V]	[kPa]	7.429
[V]	[mTorr]	2.448			

where p pressure
U measurement signal
c constant (depending on pressure unit)

Gas Type Dependence

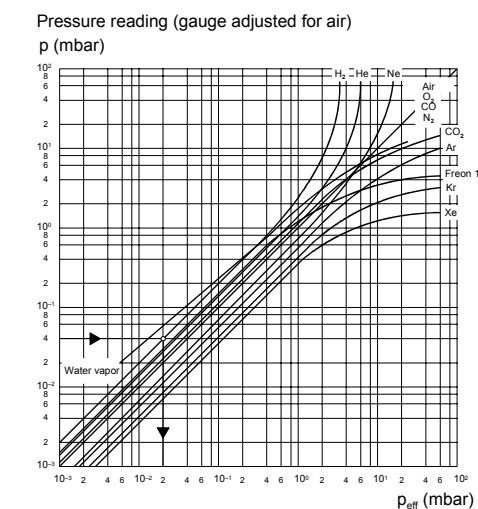

Calibration factors for the pressure range below 1 mbar

$p_{eff} = C \times \text{pressure reading}$			
Gas type	Calibration factor C	Gas type	Calibration factor C
He	0.8	H ₂	0.5
Ne	1.4	air, O ₂ , CO, N ₂	1.0
Ar	1.7	CO ₂	0.9
Kr	2.4	water vapor	0.5
Xe	3.0	freon 12	0.7

Installation

Vacuum Connection

DANGER
DANGER: overpressure in the vacuum system > 1 bar
Injury caused by released parts and harm caused by escaping process gases can result if clamps are opened while the vacuum system is pressurized.
Do not open any clamps while the vacuum system is pressurized. Use the type of clamps which are suited to overpressure.

DANGER
DANGER: overpressure in the vacuum system > 2.5 bar
KF connections with elastomer seals (e.g. O-rings) cannot withstand such pressures. Process media can thus leak and possibly damage your health.
Use O-rings provided with an outer centering ring.

DANGER
DANGER: protective ground
Incorrectly grounded products can be extremely hazardous in the event of a fault.
The gauge must be electrically connected to the grounded vacuum chamber. This connection must conform to the requirements of a protective connection according to EN 61010:
• CF, NPT, VCR® and UNF connections fulfill this requirement.
• For gauges with a KF connection, use a conductive metallic clamping ring.
• If a 1/2" tube is used, take appropriate measures for this requirement to be fulfilled.

Caution
Caution: vacuum component
Dirt and damages impair the function of the vacuum component.
When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.

Caution
Caution: dirt sensitive area
Touching the product or parts thereof with bare hands increases the desorption rate.
Always wear clean, lint-free gloves and use clean tools when working in this area.


The gauge may be mounted in any orientation. To keep condensates and particles from getting into the measuring chamber preferably choose a horizontal to upright position and possibly use a seal with a centering ring and filter. If adjustment should be possible after the gauge has been installed, be sure to install it so that the button can be accessed with a pin (→ "Adjusting the Gauge").

Remove the protective lid and install the product to the vacuum system.

Keep the protective lid.

Pirani Standard Gauge

PSG500/-S, PSG502-S,
PSG510-S, PSG512-S

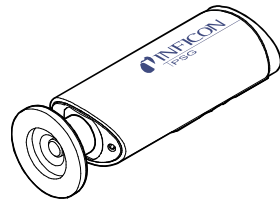

Operating Manual
Incl. Declaration of Conformity

tina44e1-f (2008-04)

Product Identification

In all communications with INFICON, please specify the information on the product nameplate. For convenient reference copy that information into the space provided below.

INFICON AG, LI-9496 Balzers
Model: _____
PN: _____
SN: _____
V _____ W _____

Validity

This document applies to products with the following part numbers:

PSG500	PSG500-S (W filament)
350-060	350-080 (DN 16 ISO-KF)
350-062	350-082 (DN 16 CF-R)
350-061	350-081 (1/8" NPT)
350-064	350-084 (8 VCR®)
350-065	350-085 (4 VCR®)
350-063	350-083 (1/2"-Rohr)
350-066	350-086 (7/16-20 UNF)
350-067	350-087 (DN 16 ISO-KF long tube)
350-068	350-088 (DN 16 CF-R long tube)

PSG502-S (Ni filament)	
350-140	(DN 16 ISO-KF)
350-142	(DN 16 CF-R)
350-141	(1/8" NPT)
350-144	(8 VCR®)
350-145	(4 VCR®)
350-143	(1/2"-Rohr)
350-146	(7/16-20 UNF)
350-147	(DN 16 ISO-KF long tube)
350-148	(DN 16 CF-R long tube)

PSG510-S (W filament)	PSG512-S (Ni filament)
350-200 (DN 16 ISO-KF)	350-300 (DN 16 ISO-KF)

The part number (PN) can be taken from the product nameplate.

If not indicated otherwise in the legends, the illustrations in this document correspond to the gauge with part number 350 060. They apply to gauges with other part numbers by analogy.

We reserve the right to make technical changes without prior notice.

All dimensions in mm.

Intended Use

The Pirani Standard Gauges PSG500/-S, PSG502-S, PSG510-S, PSG512-S have been designed for vacuum measurement of gases in the pressure range of 5 × 10⁻⁴ ... 1000 mbar.

¹⁾ INFICON controllers fulfill these requirements.


²⁾ 250 °C with long tube.



Electrical Connection

Make sure the vacuum connection is properly made (→ "Vacuum Connection").

- If no sensor cable is available, make one according to the following diagram.

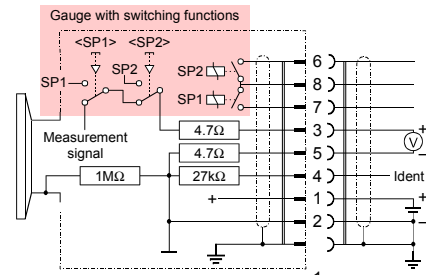

Electrical connection

Pin 1	Supply
Pin 2	Supply common, GND
Pin 3	Measurement signal or thresholds SP1/2
Pin 4	Gauge identification
Pin 5	Signal common
Pin 6, 8	Relay SP2, closing contact
Pin 7, 8	Relay SP1, closing contact

8-pole FCC-68 connector

- Connect the sensor cable to the gauge and the controller.

Operation

When the supply voltage is applied, the measurement signal is available between pins 3 and 5 (relationship between measurement signal and pressure → "Technical Data"). Allow a stabilization period of at least 10 minutes. It is advisable to operate the gauge continuously, irrespective of the pressure.


Gas Type Dependence

The measurement value is gas dependent. The pressure reading applies to dry air, O₂, CO and N₂. For other gases, it has to be corrected (→ "Technical Data"). If the gauge is operated with an INFICON controller, a calibration factor for correction of the actual reading can be applied (→ of the corresponding controller).

Adjusting the Gauge

The gauge is factory calibrated. Due to long time operation or contamination, a zero drift could occur. Periodically check the zero and adjust it if necessary. For adjusting the zero, operate the gauge under the same ambient conditions and in the same mounting orientation as normally. The gauge is adjusted to default values. However, it can also be adjusted to other pressure values, if the exact pressure value is known (reference measurement).

- If you are using a seal with centering ring and filter, check that they are clean or replace them if necessary (→ "Deinstallation").
- Activate the gauge and operate it at atmospheric pressure for at least 10 minutes.
- Press the button with a pin (max. ø1.1 mm) and the ATM adjustment is carried out. The gauge is adjusted to 1000 mbar (10 VDC) by default. By pressing the button >5 s the pressure value is increased towards 1200 mbar (or, by pressing it again, decreased towards 500 mbar) until the button is released or the limit is reached.

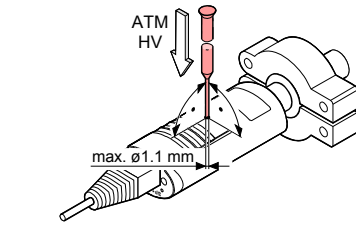

- Evacuate to $p << 10^{-4}$ mbar (recommended) or to a pressure in the range of $10^{-4} \dots 10^{-2}$ mbar and wait at least 2 minutes.
- Press the button with a pin and the HV adjustment is carried out. The gauge is adjusted to 1.2×10^{-4} mbar (1.1 VDC) by default. By pressing the button >5 s the pressure value is increased toward 1×10^{-2} mbar until the button is released or the limit is reached.


Switching Functions

(PSG500-S and PSG502-S only)

The setpoints are adjustable within a pressure range of $2 \times 10^{-3} \dots 500$ mbar (voltage range of 2.67 ... 9.61 VDC). Each switching function provides a floating relay contact (→ "Electrical Connection").

The status of the switching function is indicated by a lamp.

Status	Lamp	Relay
off	dark	deenergized
on	lit	energized

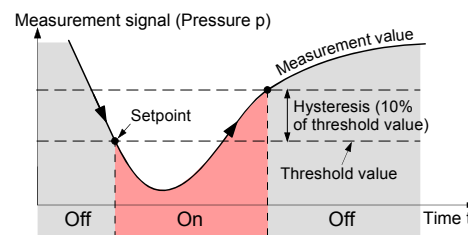

Adjusting the Setpoints


DANGER

DANGER: malfunction

If processes are controlled via the signal output, keep in mind that by pressing a button <SP> the measurement signal is suppressed and that the corresponding threshold value is output instead. This can cause malfunctions. Press a button <SP> only if you are sure that no damages can arise from a malfunction.

The status of the relay and lamp is not affected by pressing the button.

- Press the button <SP1> with a pin (max. ø1.1 mm): The gauge changes to the switching function mode and outputs the current lower threshold value at the measurement value output for about 5 s. When the button is kept depressed for more than 5 s, the threshold setting is modified until the button is released or until the limit of the setting range is reached.

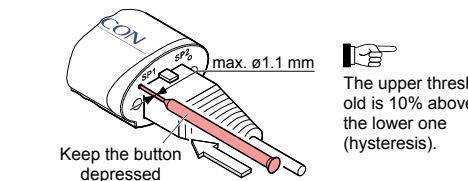

- When the button is pressed again within 5 s the threshold setting is adjusted in the reverse direction.

- Release the button. The gauge resumes operation after 5 s and the connected controller displays the current measurement value.

The adjustment procedure for <SP2> is the same as described for <SP1>.

Deinstallation

DANGER

DANGER: contaminated parts

Contaminated parts can be detrimental to health and environment. Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

Caution

Caution: vacuum component

Dirt and damages impair the function of the vacuum component. When handling vacuum components, take appropriate measures to ensure cleanliness and prevent damages.

Caution

Caution: dirt sensitive area

Touching the product or parts thereof with bare hands increases the desorption rate. Always wear clean, lint-free gloves and use clean tools when working in this area.

- Vent the vacuum system.
- Turn the gauge off.
- Unplug the sensor cable.
- Remove the gauge from the vacuum system and install the protective lid.

Maintenance, Repair

In case of severe contamination or a malfunction, the sensor can be replaced.

Gauge failures due to contamination, as well as expendable parts (filament), are not covered by the warranty.

INFICON assumes no liability and the warranty becomes null and void if any repair work is carried out by the end-user or third parties.

Spare Parts

When ordering spare parts, always indicate:

- all information on the product nameplate
- description and ordering number according to the spare parts list

Sensor	for gauge	Ordering number
	350-060, 350-080	350-920
	350-062, 350-082	350-922
	350-061, 350-081	350-921
	350-064, 350-084	350-924
	350-065, 350-085	350-926
	350-063, 350-083	350-923
	350-066, 350-086	350-925
	350-067, 350-087	350-927
	350-068, 350-088	350-928
	350-200	350-930
	350-140	350-900
	350-142	350-902
	350-141	350-901
	350-144	350-904
	350-145	350-906
	350-143	350-903
	350-146	350-905
	350-147	350-907
	350-148	350-908
	350-300	350-940

Returning the Product

WARNING

WARNING: forwarding contaminated products

Contaminated products (e.g. radioactive, toxic, caustic or microbiological hazard) can be detrimental to health and environment. Products returned to INFICON should preferably be free of harmful substances. Adhere to the forwarding regulations of all involved countries and forwarding companies and enclose a duly completed declaration of contamination.

Products that are not clearly declared as "free of harmful substances" are decontaminated at the expense of the customer. Products not accompanied by a duly completed declaration of contamination are returned to the sender at his own expense.

Disposal

DANGER

DANGER: contaminated parts

Contaminated parts can be detrimental to health and environment. Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

WARNING

WARNING: substances detrimental to the environment

Products or parts thereof (mechanical and electric components, operating fluids etc.) can be detrimental to the environment. Dispose of such substances in accordance with the relevant local regulations.

Separating the components

After disassembling the product, separate its components according to the following criteria:

- Contaminated components
Contaminated components (radioactive, toxic, caustic, or biological hazard etc.) must be decontaminated in accordance with the relevant national regulations, separated according to their materials, and disposed of.
- Other components
Such components must be separated according to their materials and recycled.

Declaration of Contamination

The service, repair, and/or disposal of vacuum equipment and components will only be carried out if a correctly completed declaration has been submitted. Non-completion will result in delay. This declaration may only be completed (in block letters) and signed by authorized and qualified staff.

- Description of product**
Type _____
Part number _____
Serial number _____
- Reason for return**

- Operating fluid(s) used**
(Must be drained before shipping.)

- Used in copper process**
no yes Seal product in plastic bag and mark it with a corresponding label.
- Process related contamination of product:**

toxic	no <input type="checkbox"/>	yes <input type="checkbox"/>
corrosive	no <input type="checkbox"/>	yes <input type="checkbox"/>
biological hazard	no <input type="checkbox"/>	yes <input type="checkbox"/>
explosive	no <input type="checkbox"/>	yes <input type="checkbox"/>
radioactive	no <input type="checkbox"/>	yes <input type="checkbox"/>
other harmful substances	no <input type="checkbox"/>	yes <input type="checkbox"/>

1) or not containing any amount of hazardous residues that exceed the permissible exposure limits
2) Products thus contaminated will not be accepted without written evidence of decontamination.

The product is free of any substances which are damaging to health. yes
- Harmful substances, gases and/or by-products**
Please list all substances, gases, and by-products which the product may have come into contact with:

Trade/product name manufacturer	Chemical name (or symbol)

Precautions associated with substance	Action if human contact
- Legally binding declaration:**
We hereby declare that the information on this form is complete and accurate and that we will assume any further costs that may arise. The contaminated product will be dispatched in accordance with the applicable regulations.
 Organization/company _____
 Address _____
 Post code, place _____
 Phone _____ Fax _____
 Email _____
 Name _____
 Company stamp _____
 Date and legally binding signature _____

This form can be downloaded from our website.
Copies: Original for addressee
1 copy for accompanying documents
1 copy for file of sender

Declaration of Conformity

We, INFICON, hereby declare that the equipment mentioned below complies with the provisions of the Directive relating to electrical equipment designed for use within certain voltage limits 2006/95/EC and the Directive relating to electromagnetic compatibility 2004/108/EC.

Pirani Standard Gauge

PSG500-S, PSG502-S,
PSG510-S, PSG512-S

Part numbers

350-060	350-080	350-140
350-062	350-082	350-142
350-061	350-081	350-141
350-064	350-084	350-144
350-065	350-085	350-145
350-063	350-083	350-143
350-066	350-086	350-146
350-067	350-087	350-147
350-068	350-088	350-148
350-200	350-300	

Standards

Harmonized and international/national standards and specifications:

- EN 61000-6-2 (Electromagnetic compatibility: generic immunity standard)
- EN 61000-6-3 (Electromagnetic compatibility: generic emission standard)
- EN 61010 (Safety requirements for electrical equipment for measurement, control and laboratory use)

Signatures

INFICON AG, Balzers

29 April 2008

Urs Wälchli

Dr. Urs Wälchli
Managing Director

29 April 2008

C. Christoffel

Claudio Christoffel
Product Manager



LI-9496 Balzers
Liechtenstein
Tel +423 / 388 3111
Fax +423 / 388 3700
reachus@inficon.com
www.inficon.com