





## Single-Channel Controller VGC401

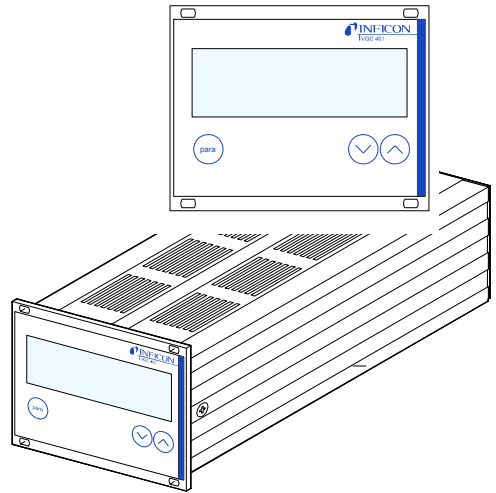

## Product Identification

In all communications with INFICON, please specify the information on the product nameplate. For convenient reference copy that information into the space provided below:


|                             |                |
|-----------------------------|----------------|
| INFICON AG, LI-9496 Balzers |                |
| Model: .....                |                |
| PN: .....                   |                |
| SN: .....                   |                |
| ..... V .....               | ..... Hz ..... |
|                             | ..... W        |

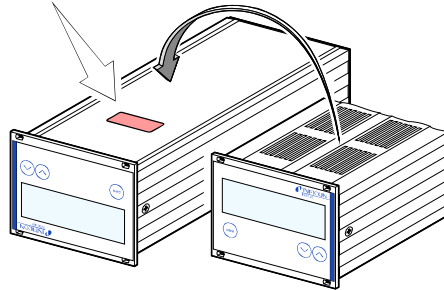

## Validity

This document applies to products with part number 398-010.

The part number (PN) can be taken from the product nameplate.

This document is based on firmware number 302-519-D. If your unit does not work as described in this document, please check that it is equipped with the above firmware version (→  47).

We reserve the right to make technical changes without prior notice.

All dimensions are indicated in mm.

## **Intended Use**

The VGC401 is used together with INFICON Transmitters (in this document referred to as gauges) for total pressure measurement. All products must be operated in accordance with their respective Operating Manuals.



## **Scope of Delivery**

- 1× Single-Channel Controller
- 1× Power cord
- 1× Rubber bar
- 2× Rubber feet
- 4× Collar screws
- 4× Plastic sleeves

## Contents

|   |           |
|---|-----------|
| Product Identification                    | 2         |
| Validity                                  | 2         |
| Intended Use                              | 3         |
| Scope of Delivery                         | 3         |
| <b>1 Safety</b>                           | <b>6</b>  |
| 1.1 Symbols Used                          | 6         |
| 1.2 Personnel Qualifications              | 6         |
| 1.3 General Safety Instructions           | 7         |
| 1.4 Liability and Warranty                | 7         |
| <b>2 Technical Data</b>                   | <b>8</b>  |
| <b>3 Installation</b>                     | <b>13</b> |
| 3.1 Personnel                             | 13        |
| 3.2 Installation, Setup                   | 13        |
| 3.2.1 Rack Installation                   | 13        |
| 3.2.2 Installation in a Control Panel     | 18        |
| 3.2.3 Use as Desk-Top Unit                | 19        |
| 3.3 Mains Power Connector                 | 20        |
| 3.4 SENSOR Connector                      | 22        |
| 3.5 CONTROL Connector                     | 23        |
| 3.6 RS232 Interface Connector             | 25        |
| <b>4 Operation</b>                        | <b>26</b> |
| 4.1 Front Panel                           | 26        |
| 4.2 Turning the VGC401 On and Off         | 27        |
| 4.3 Operating Modes                       | 27        |
| 4.4 Measurement Mode                      | 28        |
| 4.5 Parameter Mode                        | 31        |
| 4.5.1 Parameters                          | 34        |
| 4.6 Test Mode                             | 45        |
| 4.6.1 Parameters                          | 47        |
| 4.6.2 Test Programs                       | 48        |
| <b>5 Communication (Serial Interface)</b> | <b>53</b> |
| 5.1 RS232C Interface                      | 53        |
| 5.1.1 Data Transmission                   | 53        |
| 5.1.2 Communication Protocol              | 55        |
| 5.2 Mnemonics Mnemonics                   | 57        |
| 5.2.1 Measurement Mode                    | 58        |
| 5.2.2 Parameter Mode                      | 62        |
| 5.2.3 Test Mode                           | 67        |
| 5.2.4 Example                             | 71        |


|                                  |                        |           |
|----------------------------------|------------------------|-----------|
| <b>6</b>                         | <b>Maintenance</b>     | <b>72</b> |
| <b>7</b>                         | <b>Troubleshooting</b> | <b>73</b> |
| <b>8</b>                         | <b>Repair</b>          | <b>75</b> |
| <b>9</b>                         | <b>Accessories</b>     | <b>75</b> |
| <b>10</b>                        | <b>Storage</b>         | <b>76</b> |
| <b>11</b>                        | <b>Disposal</b>        | <b>76</b> |
| <b>Appendix</b>                  |                        | <b>77</b> |
| A:                               | Conversion Tables      | 77        |
| B:                               | Default Parameters     | 78        |
| C:                               | Firmware Update        | 79        |
| D:                               | Literature             | 81        |
| E:                               | Index                  | 84        |
| <b>Declaration of Conformity</b> |                        | <b>86</b> |

For cross-references within this document, the symbol (→  XY) is used, for cross-references to further documents listed under "Literature", the symbol (→  [Z]).


# 1 Safety

## 1.1 Symbols Used


Symbols for residual risks


**DANGER**

Information on preventing any kind of physical injury.


**WARNING**

Information on preventing extensive equipment and environmental damage.


**Caution**

Information on correct handling or use. Disregard can lead to malfunctions or minor equipment damage.

Further symbols



The lamp/display is lit.



The lamp/display flashes.



The lamp/display is dark.




Press the key (example: 'para' key).



Do not press any key


## 1.2 Personnel Qualifications


**Skilled personnel**

All work described in this document may only be carried out by persons who have suitable technical training and the necessary experience or who have been instructed by the end-user of the product.

### 1.3 General Safety Instructions

Adhere to the applicable regulations and take the necessary precautions for all work you are going to do and consider the safety instructions in this document.

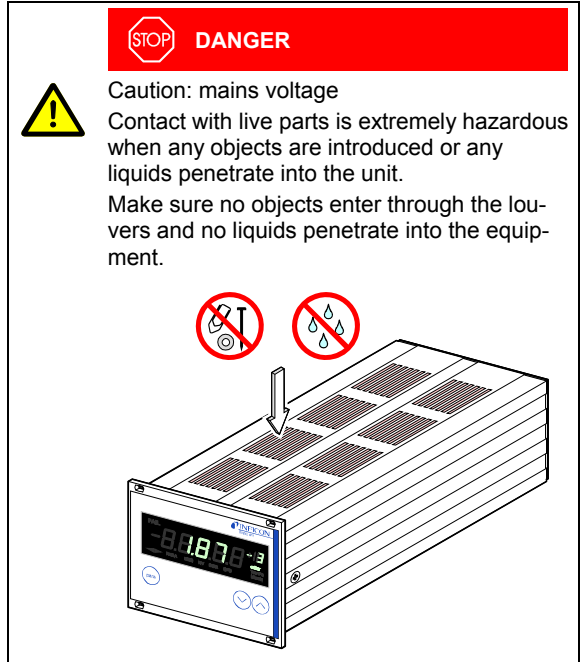

Communicate the safety instructions to all other users.

### 1.4 Liability and Warranty


INFICON assumes no liability and the warranty becomes null and void if the end-user or third parties

- disregard the information in this document
- use the product in a non-conforming manner
- make any kind of interventions (modifications, alterations etc.) on the product
- use the product with accessories not listed in the corresponding documentation.





## 2 Technical Data







|                      |   |  |
|----------------------|---|--|
| Mains specifications | Voltage   | 90 ... 250 VAC   |
|                      | Frequency   | 50 ... 60 Hz   |
|                      | Power consumption                                 | ≤30 VA   |
|                      | Overvoltage category                              | II   |
|                      | Protection class                                  | 1  |
|                      | Connection  | European appliance connector IEC 320 C14                                   |
| Ambiance             | Temperature storage                               | -20 ... +60 °C   |
|                      | Temperature operation                             | + 5 ... +50 °C   |
|                      | Relative humidity                                 | ≤80% up to +31 °C, decreasing to 50% at +40 °C                             |
|                      | Use   | indoors only<br>max. altitude 2000 m NN                                    |
|                      | Pollution degree                                  | II   |
|                      | Protection type                                   | IP30   |
| Compatible gauges    | Number  | 1  |
|                      | Compatible types                                  |  |
|                      | Pirani  | PSG (PSG400, PSG400-S, PSG100-S, PSG101-S, PSG500, PSG500-S, PSG502-S)     |
|                      | Pirani/Capacitive                                 | PCG (PCG400, PCG400-S)   |
|                      | Cold cathode                                      | PEG (PEG100)   |
|                      | Cold cathode/Pirani                               | MPG (MPG400, MPG401)   |
|                      | Hot cathode                                       | BAG (BAG100-S, BAG101-S)   |
|                      | Hot cathode/Pirani                                | BPG (BPG400, BPG402)<br>HPG (HPG400)                                       |
|                      | Capacitive  | CDG (CDG025, CDG025D, CDG045, CDG045-H, CDG045D, CDG100, CDG100D, CDG160D) |
|                      | TripleGauge™<br>Hot cathode/Pirani/<br>Capacitive | BCG (BCG450)   |




|                    |                                      |   |
|--------------------|--------------------------------------|---|
| Gauge connection   | Number                               | 2 (parallel)  |
|                    |                                      |  <b>Caution</b>                                      |
|                    | SENSOR connector                     | Do not connect more than one gauge at the same time.<br>15-pole D-Sub, female<br>RJ45 (FCC68), female<br>(pin assignment → 23)        |
| Operation          | Front panel<br>HOST (remote control) | via 3 keys<br>via RS232C interface  |
| Measurement values | Measurement ranges                   | depending on gauge<br>(→ [1] ... [20])  |
|                    | Measurement error                    |   |
|                    | gain error                           | ≤0.02% FSr  |
|                    | offset error                         | ≤0.05% FSr  |
|                    | Measurement rate                     |   |
|                    | analog                               | 100 / s   |
|                    | digital                              | 50 / s (BPG, HPG, BCG,<br>CDGxxx <sup>1)</sup> )  |
|                    |                                      | 10 / s (BAG)  |
|                    | Display rate                         | 10 / s  |
|                    | Filter time constant                 |   |
|                    | slow                                 | 750 ms ( $f_g = 0.2$ Hz)  |
|                    | normal (nor)                         | 150 ms ( $f_g = 1$ Hz)  |
|                    | fast                                 | 20 ms ( $f_g = 8$ Hz)   |
|                    | Pressure units                       | mbar, Pa, Torr, Micron  |
|                    | Zero adjust                          | for linear gauges   |
|                    | Correction factor                    | for logarithmic gauges<br>0.10 ... 10.00  |
|                    | A/D converters                       | resolution >0.001% FSr<br>(The measurement values of<br>BPG, HPG, BCG, BAG and<br>CDGxxx <sup>1)</sup> are transmitted<br>digitally.) |

<sup>1)</sup> CDG025D, CDG045D, CDG100D, CDG160D

|                          |                   |   |
|--------------------------|-------------------|---|
| Gauge supply             | Voltage           | +24 VDC $\pm$ 5%  |
|                          | Current           | 750 mA  |
|                          | Power consumption | 18 W  |
|                          | Fuse protection   | 900 mA with PTC element, self-resetting after turning the VGC401 off or disconnecting the gauge   |
| Switching function       | Number            | 1   |
|                          | Reaction delay    | $\leq$ 10 ms if switching threshold close to measurement value (for larger differences consider filter time constant).                      |
|                          | Adjustment range  | depending on gauge<br>( $\rightarrow$  [1] ... [20])       |
|                          | Hysteresis        | $\geq$ 1% FSr for linear gauges<br>$\geq$ 10% of measurement value for logarithmic gauges   |
| Switching function relay | Contact type      | floating changeover contact   |
|                          | Load max.         | 125 VAC, 60 W (ohmic)<br>110 VDC, 2 A, 60 W (ohmic)   |
|                          |                   |  <b>DANGER</b>   |
|                          |                   | For benchtop use, max. 30 VAC or 60 VDC may be connected.   |
|                          | Service life      |   |
|                          | mechanic          | $10^8$ cycles   |
|                          | electric          | $10^5$ cycles (at maximum load)   |
|                          | Contact positions | $\rightarrow$  24  |
|                          | CONTROL connector | 9-pole D-Sub, male<br>(pin assignment $\rightarrow$  24) |

|                    |                                 |   |
|--------------------|---------------------------------|---|
| Error signal       | Number                          | 1   |
|                    | Reaction time                   | ≤20 ms  |
| Error signal relay | Contact type                    | floating normally open contact  |
|                    | Load max.                       | 125 VAC, 60 W (ohmic)<br>110 VDC, 2 A, 60 W (ohmic)   |
|                    |                                 |   |
|                    |                                 | For benchtop use, max.<br>30 VAC or 60 VDC may be connected.  |
|                    | Service life                    |   |
|                    | mechanic                        | 10 <sup>8</sup> cycles  |
|                    | electric                        | 10 <sup>5</sup> cycles (at maximum load)  |
|                    | Contact positions               | →  24  |
|                    | CONTROL connector               | 9-pole D-Sub, male<br>(pin assignment →  24)     |
| Analog output      | Number                          | 1   |
|                    | Voltage range                   | 0 ... +10 V   |
|                    | Internal resistance             | 660 Ω   |
|                    | Measurement signal vs. pressure | depending on gauge<br>(→  [1] ... [20])          |
|                    | CONTROL connector               | 9-pole D-Sub, male<br>(pin assignment →  24)     |
| Interface          | Standard                        | RS232C  |
|                    | Protocol                        | ACK/NAK, ASCII with<br>3-character mnemonics,<br>bi-directional data flow,<br>8 data bits, no parity bit,<br>1 stop bit           |
|                    | RS232C                          | only TXD and RXD used   |
|                    | Transmission rate               | 9600, 19200, 38400 baud   |
|                    | RS232 connector                 | 9-pole D-Sub, female<br>(pin assignment →  25) |

Dimensions [mm]

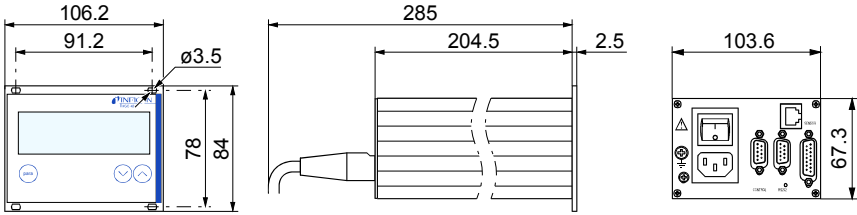

Use

For incorporation into a rack or control panel or as desk-top unit

Weight

0.85 kg

## 3 Installation

### 3.1 Personnel



#### Skilled personnel

The unit may only be installed by persons who have suitable technical training and the necessary experience.

### 3.2 Installation, Setup

The VGC401 is suited for incorporation into a 19" rack or a control panel or for use as desk-top unit.



#### DANGER

Caution: damaged product

Putting a damaged product into operation can be extremely hazardous.

In case of visible damages, make sure the product is not put into operation.

#### 3.2.1 Rack Installation

The VGC401 is designed for installation into a 19" rack chassis adapter according to DIN 41 494. For this purpose, four collar screws and plastic sleeves are supplied with it.



#### DANGER


Caution: protection class of the rack

If the product is installed in a rack, it is likely to lower the protection class of the rack (protection against foreign bodies and water) e.g. the EN 60204-1 regulations for switching cabinets.

Take appropriate measures for the rack to meet the specifications of the protection class.


Guide rail

In order to reduce the mechanical strain on the front panel of the VGC401, preferably equip the rack chassis adapter with a guide rail.

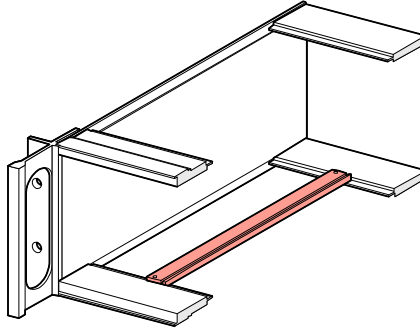


Slide rails

For safe and easy installation of heavy rack chassis adapters, preferably equip the rack frame with slide rails.

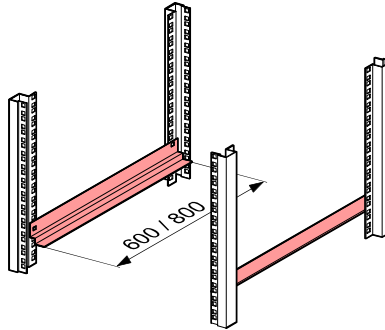

Mounting height

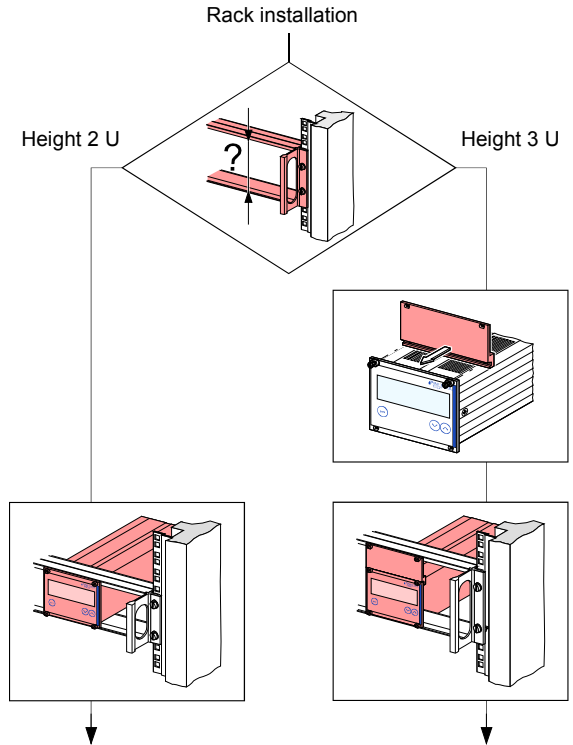


Height 2 U rack chassis adapter


- 1 Secure the rack chassis adapter in the rack frame.



The admissible maximum ambient temperature (→ 8) must not be exceeded neither the air circulation obstructed.

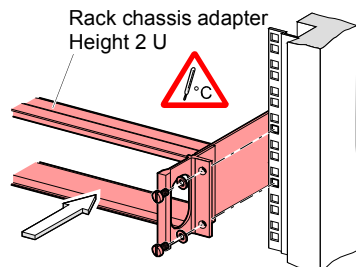

- 2** Slide the VGC401 into the adapter ...

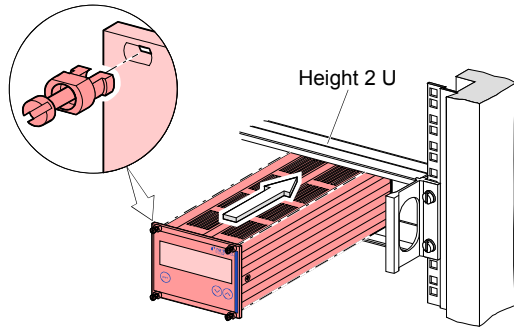

... and fasten the VGC401 to the rack chassis adapter using the screws supplied with it.


Height 3 U rack chassis adapter

For incorporation into a 19" rack chassis adapter, height 3, an adapter panel (incl. two collar screws and plastic sleeves) is available (→ 75).

- 1** Secure the rack adapter in the rack frame.




The admissible maximum ambient temperature (→ 8) must not be exceeded neither the air circulation obstructed.

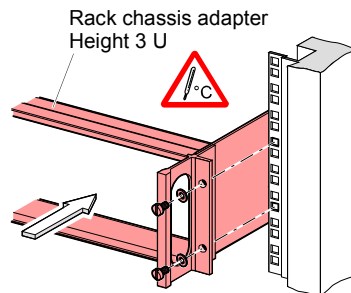




- 2** Mount the adapter panel as upper extension to the front panel of the VGC401 using the screws supplied with the adapter panel.

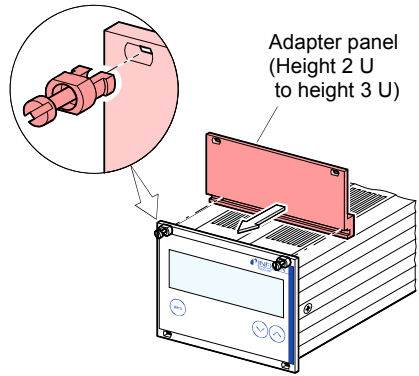

- 3** Slide the VGC401 into the rack chassis adapter ...

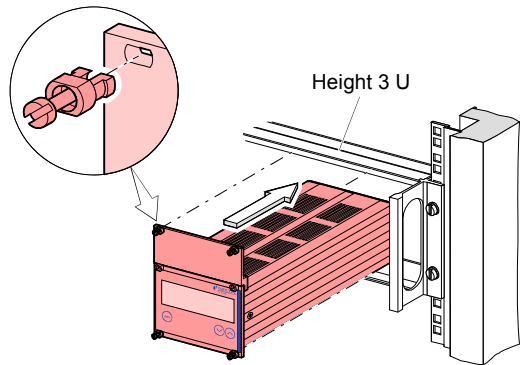

...and fasten the adapter panel to the rack chassis adapter using the screws supplied with the VGC401.


### 3.2.2 Installation in a Control Panel

**DANGER**

Caution: protection class of the control panel  
If the product is installed in a rack, it is likely to lower the protection class of the rack (protection against foreign bodies and water) e.g. according to the EN 60204-1 regulations for switching cabinets.

Take appropriate measures for the control panel to meet the specifications of the protection class.


For mounting the VGC401 into a control panel, the following cut-out is required:

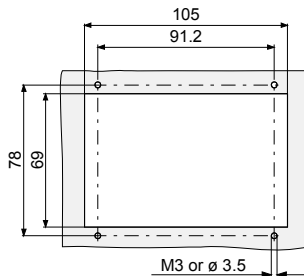

The admissible maximum ambient temperature (→ 8) must not be exceeded neither the air circulation obstructed.

For reducing the mechanical strain on the front panel, preferably support the unit.

- 1 Slide the VGC401 into the cut-out of the control panel ...

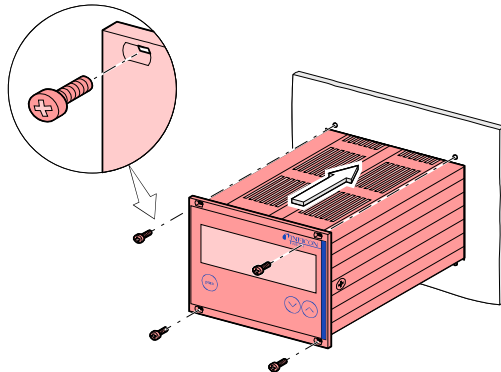


... and secure it with four M3 or equivalent screws.

### 3.2.3 Use as Desk-Top Unit

The VGC401 is also suited for use as desk-top unit. For this purpose, two self-adhesive rubber feet as well as a slip-on rubber bar are supplied with it.

- 1 Stick the two supplied rubber feet to the rear part of the bottom plate ...

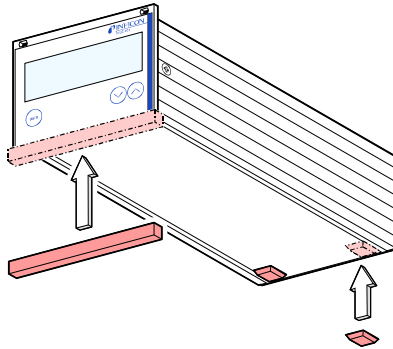


... and slip the supplied rubber bar onto the bottom edge of the front panel.




Select a location where the admissible maximum ambient temperature (→ 8) is not exceeded (e.g. due to sun irradiation).

### 3.3 Mains Power Connector



**DANGER**




Caution: line voltage  
Incorrectly grounded products can be extremely hazardous in the event of a fault.

Use only a 3-conductor power cable ( $3 \times 1.5 \text{ mm}^2$ ) with protective ground. The power connector may only be plugged into a socket with a protective ground. The protection must not be nullified by an extension cable without protective ground.

The unit is supplied with a 2.5 m power cord. If the mains cable is not compatible with your system, use your own, suitable cable with protective ground.




The socket must be fuse-protected with  
 $10 \text{ A}_{\text{max}}$

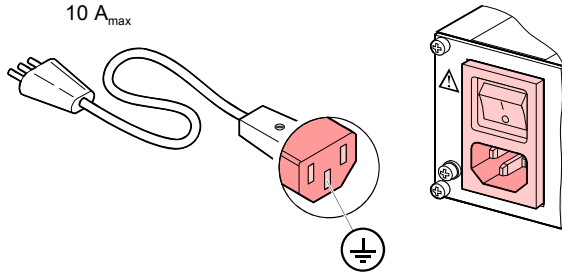

If the unit is installed in a switch cabinet, the mains voltage should be supplied and turned on via a central power distributor.


## Grounding


On the rear of the unit, there is a screw which can be used to connect the unit to ground, e.g. using the grounding of the pumping station.

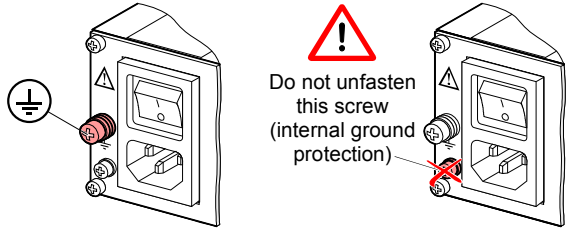



### 3.4 SENSOR Connector

The VGC401 is equipped with two different gauge connectors.

 **Caution**


 Caution: one channel measurement unit  
Connecting more than one gauge at the same time may lead to gauge destruction.

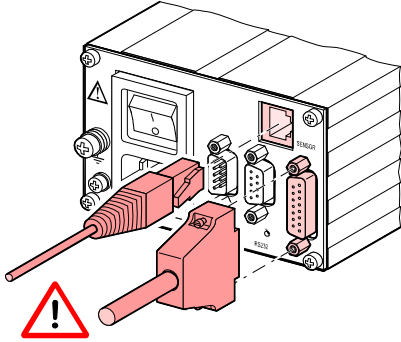


 1 only at once

Make sure that there is never more than one gauge connected to the VGC401 at the same time.


Connect the gauge to one of the two SENSOR connectors on the rear of the unit. Use a screened 1:1 cable (electromagnetic compatibility). Make sure the gauge is compatible (→ 8).

 **DANGER**

 Caution: protective low voltage  
According to EN 61010, voltages exceeding 30 VAC or 60 VDC are hazardous.  
If you are using the VGC401 as desk-top unit, you may only connect a protective low voltage (SELV-E acc. to EN 61010).



Pin assignment  
SENSOR

Pin assignment of  
the 8-pole RJ45  
appliance connector:

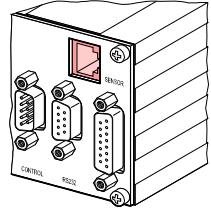

| Pin | Signal                              |
|-----|-------------------------------------|
| 4   | Identification                      |
| 1   | Supply +24 VDC                      |
| 2   | Supply common GND                   |
| 3   | Signal input (Measurement signal+)  |
| 5   | Signal common (Measurement signal-) |
| 6   | Status                              |
| 7   | HV_L                                |
| 8   | HV_H                                |

Pin assignment of  
the female 15-pole  
D-Sub appliance  
connector:

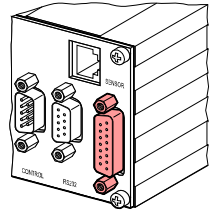

| Pin  | Signal                              |
|------|-------------------------------------|
| 10   | Identification                      |
| 8    | Supply for BPG, HPG, BCG and BAG    |
| 11   | Supply for CDG                      |
| 5    | Supply common GND                   |
| 2    | Signal input (Measurement signal+)  |
| 12   | Signal common (Measurement signal-) |
| 3    | Status                              |
| 1    | Emission status                     |
| 7    | Degas                               |
| 4    | HV_H                                |
| 13   | RXD                                 |
| 14   | TXD                                 |
| 15   | Screening = chassis                 |
| 6, 9 | not connected                       |

### 3.5 CONTROL Connector

This connector allows to read the measurement signal, to evaluate state of the floating switching function and error contacts, and to activate/deactivate the high vacuum measurement circuit (only for PEG cold cathode gauge and BAG ionization vacuum gauge).



Connect the peripheral components to the CONTROL connector on the rear of the unit. Use a screened cable (electromagnetic compatibility).

**STOP DANGER**




Caution: protective low voltage  
According to EN 61010, voltages exceeding 30 VAC or 60 VDC are hazardous.

If you are using the VGC401 as desktop unit, you may only connect a protective low voltage (SELV-E acc. to EN 61010).

Pin assignment  
Contact positions  
CONTROL

Pin assignment of the male 9-pole D-Sub appliance connector:

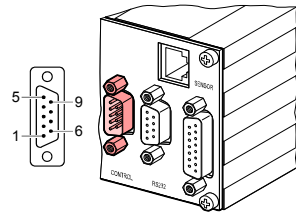

| Pin   | Signal  |
|---|---|
| 1   | Analog output 0 ... +10 VDC                         |
| 7   | Chassis = GND                                       |
| 5   | HV_H on +24 V<br>off 0 V                            |
| The control over this signal is placed superior to the key operation.   |   |
| 4   | Pressure below threshold                            |
| 3   | Pressure above threshold or power supply turned off |
| 2   | Pressure above threshold or power supply turned off |
| Error signal  |   |
| 9   | No error  |
| 8   | Error or power supply turned off                    |
| Supply for relays with higher switching power   |   |
| 6   | +24 VDC, 200 mA                                     |
| 7   | Chassis = GND                                       |
| Fuse-protected at 300 mA with PTC element, self-resetting after power off or pulling the CONTROL connector. Meets the requirements of a grounded protective extra low voltage (SELV-E according to EN 61010). |   |



### 3.6 RS232 Interface Connector


The RS232C interface allows for operating the VGC401 via a HOST or terminal. It can also be used for updating the firmware (→ 79).



Connect the serial interface to the RS232 connector on the rear of the unit using your own, screened (electromagnetic compatibility) cable.


**DANGER**

Caution: protective low voltage  
According to EN 61010, voltages exceeding 30 VAC or 60 VDC are hazardous.  
If you are using the VGC401 as desktop unit, you may only connect a protective low voltage (SELV-E acc. to EN 61010).

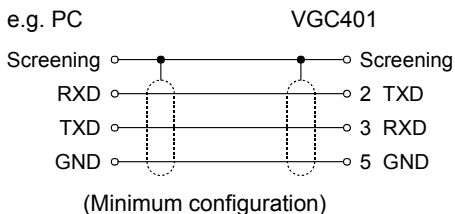

#### Pin assignment RS232


Pin assignment of the female 9-pole D-Sub appliance connector:

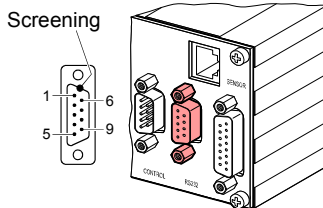

| Pin | Signal | Pin                 | Signal        |
|-----|--------|---------------------|---------------|
| 2   | TXD    | 1                   | not connected |
| 3   | RXD    | 4                   | not connected |
| 5   | GND    | 7                   | not connected |
| 6   | DSR    | Chassis = screening |               |
| 8   | CTS    |                     |               |
| 9   | GND    |                     |               |

## 4 Operation

### 4.1 Front Panel

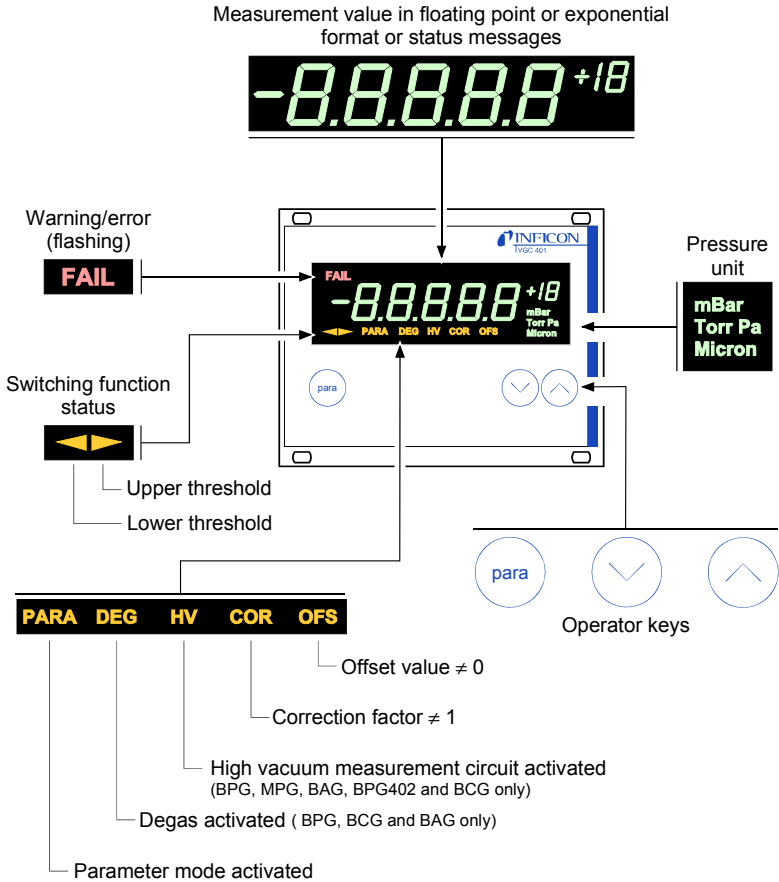


## 4.2 Turning the VGC401 On and Off

Make sure the VGC401 is correctly installed and the specifications in the Technical Data are met.

Turning the VGC401 on

The power switch is on the rear of the unit.

Turn the VGC401 on with the power switch (or centrally, via a switched power distributor, if the unit is incorporated in a rack).

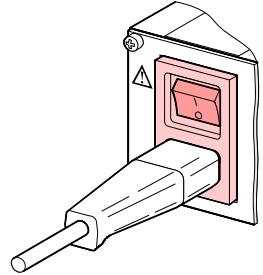

After power on, the VGC401 ...

- automatically performs a self-test
- identifies the connected gauge
- activates the parameters that were in effect before the last power off
- switches to the Measurement mode
- adapts the parameters if required (if another gauge was previously connected).

Turning the VGC401 off

Turn the VGC401 off with the power switch (or centrally, via a switched power distributor, if the unit is incorporated in a rack).



Wait at least 10 s before turning the VGC401 on again in order for it to correctly initialize itself.


## 4.3 Operating Modes

The VGC401 works in the following operating modes:

- Measurement mode  
for displaying measurement values or status messages (→ [128](#))
- Parameter mode  
for entering or displaying parameters (→ [131](#))
- Test mode  
for running internal test programs (→ [145](#))
- Program transfer mode  
for updating the firmware (→ [179](#))

#### 4.4 Measurement Mode

The Measurement mode is the standard operating mode of the VGC401. Measurement values and status messages as well as the gauge identification are displayed in this mode.

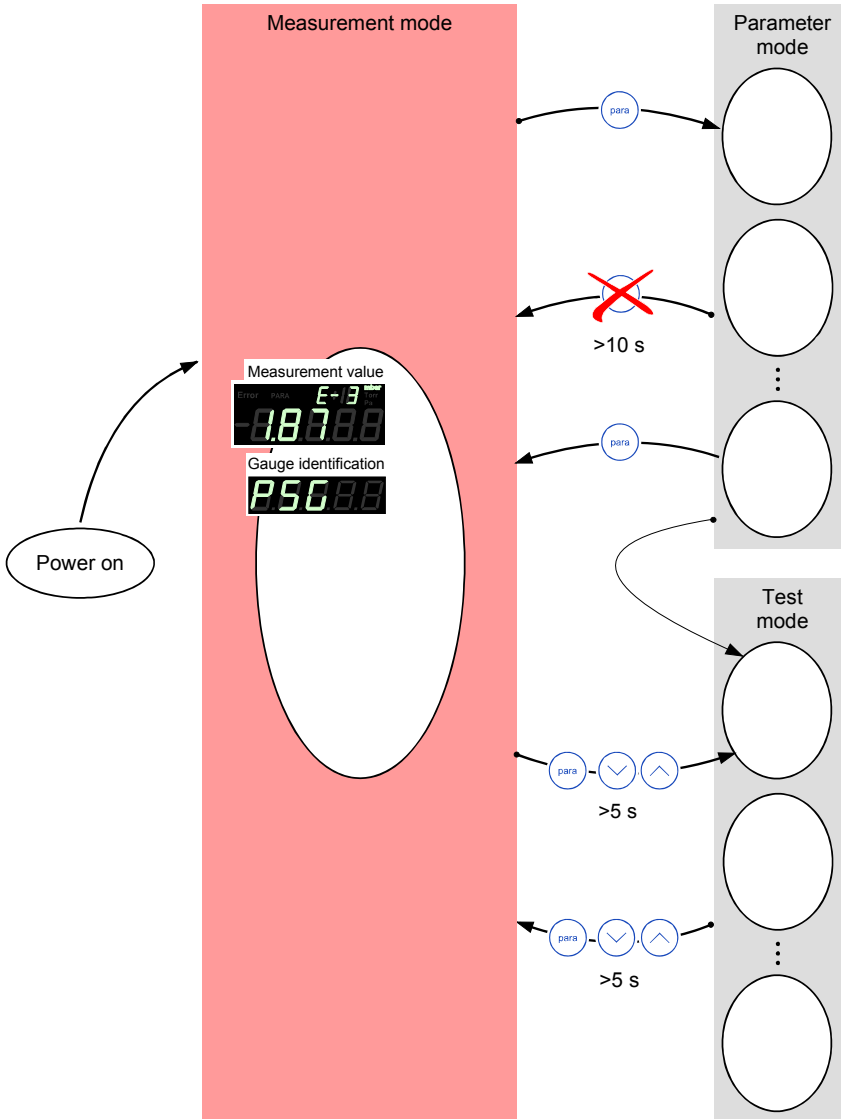


Turning the gauge on and off


Available for:

- Pirani (PSG)
- Pirani/Capacitive (PCG)
- Cold cathode (PEG)
- Cold cathode/Pirani (MPG)
- Hot cathode (BAG)
- Hot cathode/Pirani (BPG, HPG)
- Capacitive (CDG)
- Hot cathode/Pirani/Capacitive (BCG)


**HV**



⇒ Press key >1 s:  
The gauge is turned off.  
**OFF** is displayed instead of the measurement value.



⇒ Press key >1 s:  
The gauge is turned on. A status message may be displayed instead of the measurement value:

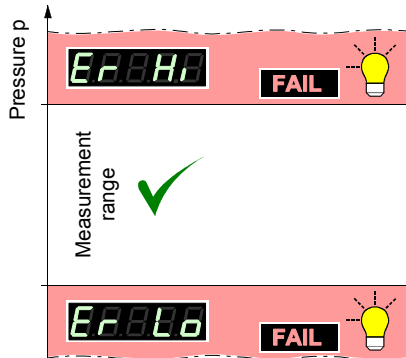

The high vacuum measurement circuit of these gauges can be activated in both, the Measurement and the Parameter mode (→ 42).

Displaying the gauge identification



⇒ Press keys >0.5 s:  
The type of the connected gauge is automatically identified and displayed for 5 s:

|  |  |
|--|--|
| Pirani gauge<br>(PSG400, PSG400-S, PSG100-S,<br>PSG101-S, PSG500, PSG500-S,<br>PSG502-S) |  |
| Pirani/Capacitive gauge<br>(PCG400, PCG400-S)  |  |
| Cold cathode gauge<br>(PEG100)   |  |
| Cold cathode/Pirani gauge<br>(MPG400, MPG401)  |  |
| Hot cathode gauge<br>(BAG100-S, BAG101-S)  |  |
| Hot cathode/Pirani gauge<br>(BPG400)   |  |
| Hot cathode/Pirani gauge<br>(BPG402)   |  |
| Hot cathode/Pirani gauge<br>(HPG400)   |  |
| Hot cathode/Pirani/Capacitive<br>gauge (BCG450)  |  |
| Linear gauge (capacitive. analog)<br>(CDG025, CDG045, CDG045-H,<br>CDG100)               |  |
| Linear gauge (capacitive. digital)<br>(CDG025D, CDG045D, CDG100D,<br>CDG160D)            |  |
| No gauge connected<br>(no Sensor)  |  |
| Connected gauge cannot be<br>identified (no Identifier)                                  |  |

Getting to the Parameter mode



→ 31


Getting to the Test mode



Press keys >5 s  
(→ 45)

### 4.5 Parameter Mode

The Parameter mode is used for displaying, editing and entering parameter values.

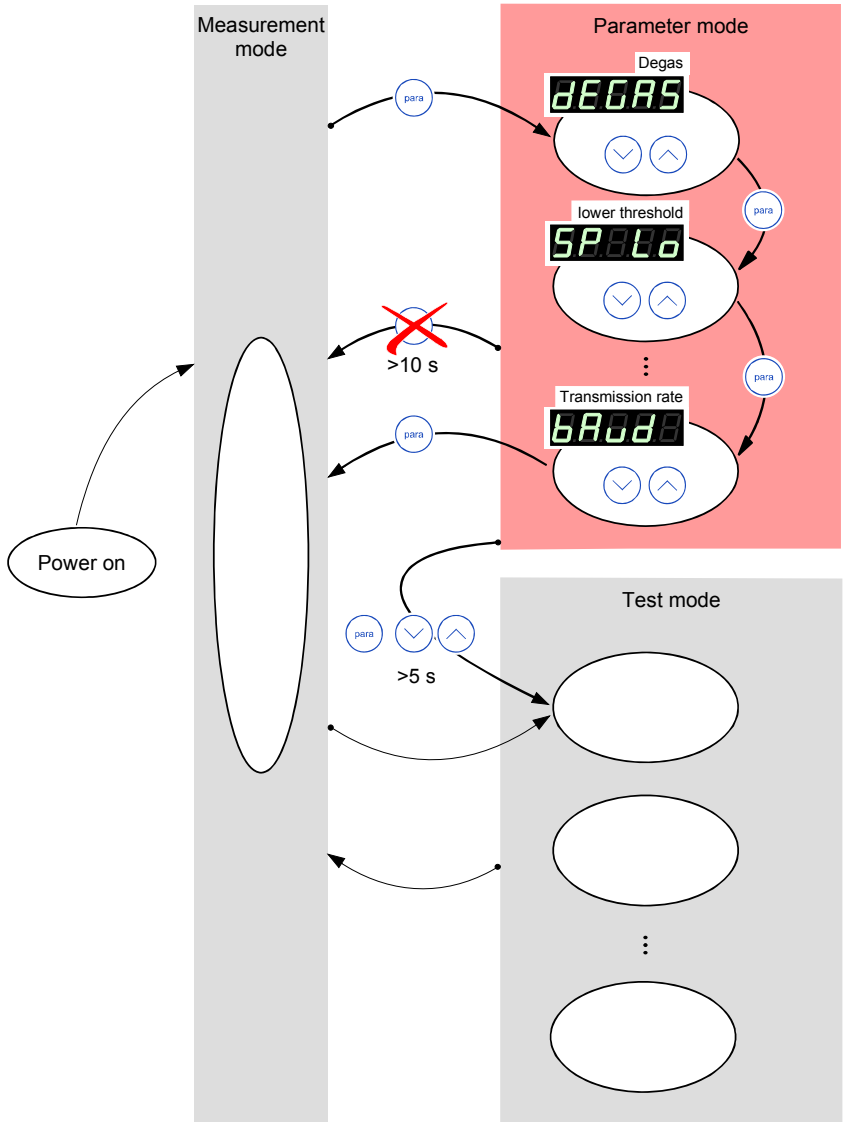

Selecting a parameter



⇒ The name of the parameter

e.g.: **DEGAS**

Degas

is displayed as long as the key is pressed or at least for 2 s.

Afterwards, the currently valid parameter value is displayed.


Some parameters are not available for all gauge types. They are only displayed if available.

→ 34 34 37 38 40 40 41 42 43 43 44 44

| Available for | DEGAS | SP.HI.LO | FSr | oFS | u.u.t | Co | oF | HIGH | D.G.A.T | BARd | ER1 | FL |
|---------------|-------|----------|-----|-----|-------|----|----|------|---------|------|-----|----|
| PSG           | -     | ✓        | -   | -   | ✓     | ✓  | ✓  | -    | ✓       | ✓    | -   | -  |
| PCG           | -     | ✓        | -   | -   | ✓     | ✓  | ✓  | -    | ✓       | ✓    | -   | -  |
| PEG           | -     | ✓        | -   | -   | ✓     | ✓  | ✓  | ✓    | ✓       | ✓    | -   | -  |
| NP6           | -     | ✓        | -   | -   | ✓     | ✓  | ✓  | -    | ✓       | ✓    | -   | -  |
| 6PG           | ✓     | ✓        | -   | -   | ✓     | ✓  | -  | -    | ✓       | ✓    | -   | -  |
| 6PG2          | ✓     | ✓        | -   | -   | ✓     | ✓  | -  | -    | ✓       | ✓    | ✓   | ✓  |
| HPC           | -     | ✓        | -   | -   | ✓     | ✓  | -  | -    | ✓       | ✓    | -   | -  |
| 6AG           | ✓     | ✓        | -   | -   | ✓     | ✓  | -  | ✓    | ✓       | ✓    | -   | -  |
| CDG           | -     | ✓        | ✓   | ✓   | ✓     | -  | ✓  | -    | -       | ✓    | -   | -  |
| CDGd          | -     | ✓        | ✓   | ✓   | ✓     | -  | ✓  | -    | -       | ✓    | -   | -  |
| 6CG           | ✓     | ✓        | -   | -   | ✓     | ✓  | -  | -    | ✓       | ✓    | ✓   | -  |



Editing the parameter value

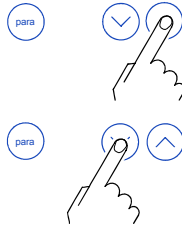


⇒ Press key <1 s:  
The value is increased/  
decreased by 1 increment.

Press key >1 s:  
The value is increased/  
decreased continuously.

Modifications of parameters come into effect immediately and are stored automatically. Exceptions are mentioned under the corresponding parameters.

Loading the default parameters




⇒ Press keys >5 s:  
All user-defined parameters  
are restored to their default  
values (→ 78).



Loading of the default parameter settings is irreversible.

Getting to the Test mode




Press keys >5 s  
(→ 45)

### 4.5.1 Parameters







#### Degas

Contamination deposits on the electrode system of Hot cathode gauges may cause instabilities of the measurement values. The Degas function allows to clean the electrode system.

 BAG10X and BPG402 gauges: The Degas function acts only upon the active filament.


Available for:

- Pirani (PSG)
- Pirani/Capacitive (PCG)
- Cold cathode (PEG)
- Cold cathode/Pirani (MPG)
- Hot cathode (BAG)
- Hot cathode/Pirani (BPG)
- Hot cathode/Pirani (HPG)
- Capacitive (CDG)
- Hot cathode/Pirani/Capacitive (BCG)

|   | Value  |
|---|--|
|  |   |
|  | ⇒ Normal operation.   |
|  | ⇒ Degas: The electron collection grid is heated to ≈700 °C by electron bombardment and the electrode system is thus cleaned.  |
|   | Duration of the Degas function: 3 min (can be aborted).  |

#### Lower/upper switching threshold

The VGC401 has a switching function with two adjustable thresholds. The status of the switching function is displayed on the front panel (→ 26) and can be evaluated via the floating contact at the CONTROL connector (→ 23).

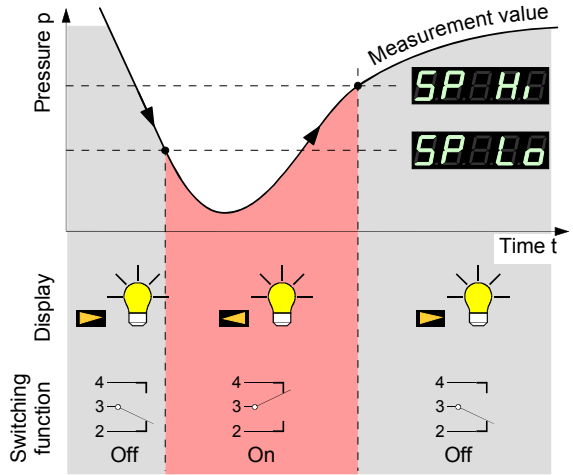

|       | Value  |
|-------|--|
|       | The lower switching threshold (Setpoint low) defines the pressure at which the switching function is activated when the pressure is dropping.<br>⇒ gauge dependent (→ table).<br>If another gauge type is connected, the VGC401 automatically adjusts the switching threshold if required. |
| e.g.: |  |

|  | lower<br>threshold<br>limit | upper<br>threshold<br>limit |
|--|-----------------------------|-----------------------------|
|  | $2 \times 10^{-3}$          | $5 \times 10^2$             |
|  | $2 \times 10^{-3}$          | $1.5 \times 10^3$           |
|  | $1 \times 10^{-9}$          | $1 \times 10^{-2}$          |
|  | $5 \times 10^{-9}$          | $1 \times 10^3$             |
|  | $1 \times 10^{-8}$          | $1 \times 10^3$             |
|  | $1 \times 10^{-8}$          | $1 \times 10^3$             |
|  | $1 \times 10^{-6}$          | $1 \times 10^3$             |
|  | $1 \times 10^{-10}$         | $1 \times 10^{-1}$          |
|  | FSr / 1000                  | FSr                         |
|  | FSr / 1000                  | FSr                         |
|  | $1 \times 10^{-8}$          | $1.5 \times 10^3$           |

all values in mbar, Cor = 1



The minimum hysteresis between the upper and lower switching threshold is at least 10% of the lower threshold or 1% of the set full scale value. If the value of the minimum hysteresis drops below these values, the upper threshold is automatically adjusted. This prevents unstable states.

|               | Value   |
|---------------|---|
| <br><br>e.g.: | The upper switching threshold (Setpoint high) defines the pressure at which the switching function is deactivated when the pressure is rising.<br><br>⇒ gauge dependent (→ table).<br><br>If another gauge type is connected, the VGC401 automatically adjusts the threshold if required. |

|      | lower threshold limit       | upper threshold limit |
|------|-----------------------------|-----------------------|
|      | SP.H.                       | SP.H.                 |
| PSG  | +10% lower threshold        | $5 \times 10^2$       |
| PCG  | +10% lower threshold        | $1.5 \times 10^3$     |
| PEG  | +10% lower threshold        | $1 \times 10^{-2}$    |
| MPG  | +10% lower threshold        | $1 \times 10^3$       |
| BPG  | +10% lower threshold        | $1 \times 10^3$       |
| BPG2 | +10% lower threshold        | $1 \times 10^3$       |
| HPG  | +10% lower threshold        | $1 \times 10^3$       |
| BAG  | +10% lower threshold        | $1 \times 10^{-1}$    |
| CDG  | +1% measurement range (FSr) | FSr                   |
| CDG  | +1% measurement range (FSr) | FSr                   |
| BCG  | +10% lower threshold        | $1.5 \times 10^3$     |

all values in mbar, Cor = 1





The minimum hysteresis between the upper and lower switching threshold is at least 10% of the lower threshold or 1% of the set full scale value. This prevents unstable states.


Measurement range of capacitive gauges

The full scale value of the measurement range (Full Scale range) of the linear gauges has to be defined by the user; the full scale value of logarithmic gauges is automatically recognized.

Available for:

- Pirani (PSG)
- Pirani/Capacitive (PCG)
- Cold cathode (PEG)
- Cold cathode/Pirani (MPG)
- Hot cathode (BAG)
- Hot cathode/Pirani (BPG, HPG)
- Capacitive (CDG)
- Hot cathode/Pirani/Capacitive (BCG)

|  | Value   |
|--|---|
| <br>e.g.:  | ⇒ 0.01 mbar<br>0.01 Torr, 0.02 Torr, 0.05 Torr<br>0.10 mbar<br>0.10 Torr, 0.25 Torr, 0.50 Torr<br>1 mbar<br>1 Torr, 2 Torr<br>10 mbar<br>10 Torr<br>100 mbar<br>100 Torr<br>1000 mbar, 1100 mbar<br>1000 Torr<br>2 bar, 5 bar, 10 bar, 50 bar |

Conversion table → Appendix,  77

## Offset correction

The offset value is displayed, zero adjustment of the gauge (CDGxxxD only) and adjusted to the currently measured value (in the range -5 ... +110% of the full scale setting).




First adjust the gauge and then the controller.

Available for:

- Pirani (PSG)
- Pirani/Capacitive (PCG)
- Cold cathode (PEG)
- Cold cathode/Pirani (MPG)
- Hot cathode (BAG)
- Hot cathode/Pirani (BPG, HPG)
- Capacitive (CDG)
- Hot cathode/Pirani/Capacitive (BCG)

The offset correction affects:

- the displayed measurement value
- the displayed threshold value of the switching functions
- the analog output at the CONTROL connector  
(→  23)

|       | Value  |
|-------|--|
|       |  |
|       | ⇒ Offset correction deactivated  |
| e.g.: | ⇒ Offset correction activated  |
|       | ⇒ Press key >2 s:<br>The offset value is readjusted. The actual measurement value is accepted as new offset value. |
|       | ⇒ Reset the offset value.  |
|       | ⇒ Press >2 s<br>Zero adjustment of the gauge (CDGxxxD only).   |

When the offset correction is activated, the stored offset value is subtracted from the actual measurement value. This allows measuring relative to a reference pressure.



When the zero of the gauge is readjusted, the offset correction must be deactivated.

Pressure unit

Unit of measured values, thresholds etc.. See Appendix (→ 77) for conversion.

|  | Value  |  |
|--|--|--|
|  |  |  |
|  | ⇒ mbar/bar   |  |
|  | ⇒ Torr (only available if Torr lock is not activated i.e. Torr is not suppressed → 48) |  |
|  | ⇒ Pascal   |  |
|  | ⇒ Micron (=mTorr)  |  |

A change of the pressure unit influences also the settings of the BPG, HPG and BCG gauges.

When selecting Micron, above 99000 Micron the readout automatically changes over to Torr. When the pressure drops below 90 Torr the instrument automatically switches back to Micron.

Correction factor

The correction factor allows the measured value to be calibrated for other gases than N<sub>2</sub> (→ 11 [1], [2], [3], [6], [12], [13], [14], [15], [20]).

Available for:

|   |       | Only for pressures       |
|---|-------|--------------------------|
| <input checked="" type="checkbox"/> Pirani                        | (PSG) |                          |
| <input checked="" type="checkbox"/> Pirani/Capacitive             | (PCG) | <10 mbar                 |
| <input checked="" type="checkbox"/> Cold cathode                  | (PEG) |                          |
| <input checked="" type="checkbox"/> Cold cathode/Pirani           | (MPG) | <1×10 <sup>-2</sup> mbar |
| <input checked="" type="checkbox"/> Hot cathode                   | (BAG) |                          |
| <input checked="" type="checkbox"/> Hot cathode/Pirani            | (BPG) | <1×10 <sup>-2</sup> mbar |
| <input checked="" type="checkbox"/> Hot cathode/Pirani            | (HPG) |                          |
| <input type="checkbox"/> Capacitive                               | (CDG) |                          |
| <input checked="" type="checkbox"/> Hot cathode/Pirani/Capacitive | (BCG) | <1 mbar                  |



|       | Value  |   |
|-------|--|---|
|       | <div style="text-align: right;"><b>COR</b></div><br> |   |
| e.g.: |  | ⇒ No correction   |
| e.g.: |  | ⇒ Measurement value corrected by a factor of 0.10 ... 10.00 |

Measurement value filter

The measurement value filter permits a better evaluation of unstable or disturbed measuring signals.


The filter affects:

- the displayed measurement value
- the analog output
- the digitally transmitted measurement value of the Hot cathode gauges BPG, HPG, BCG and BAG


|  | Value   |
|--|---|
|  | ⇒ Fast:<br>The VGC401 responds quickly to fluctuations in measured values. As a result, it will be more sensitive to disturbed measurement signals. |
|  |   |
|  |   |



⇒ Normal:  
Good relationship between response and sensitivity of the display and the switching functions to changes in the measured values.

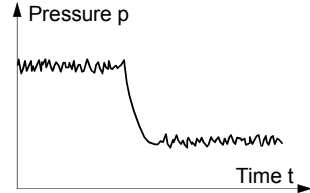

⇒ Slow:  
The VGC401 does not respond to small changes in measured values. As a result, it will respond more slowly to changes in the measured values.

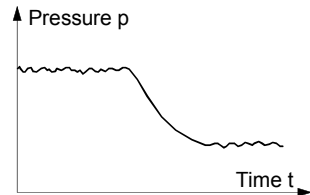

Turning the gauge on/off

Activating/deactivating the high vacuum measurement circuit (→ also 29).

Available for:

- Pirani (PSG)
- Pirani/Capacitive (PCG)
- Cold cathode (PEG)
- Cold cathode/Pirani (MPG)
- Hot cathode (BAG)
- Hot cathode/Pirani (BPG, HPG)
- Capacitive (CDG)
- Hot cathode/Pirani/Capacitive (BCG)

|  | Value   |
|--|---|
|  |   |
|  | ⇒ High vacuum measurement circuit activated   |
|  | ⇒ High vacuum measurement circuit deactivated |

Display resolution (digits)

Display resolution of measured values.

|  | Value   |
|--|---|
|  |   |
|  | ⇒ Display <ul style="list-style-type: none"> <li>• rounded to one decimal digit </li> <li>• or two integrals </li> </ul>    |
|  | ⇒ Display <ul style="list-style-type: none"> <li>• rounded to two decimal digits </li> <li>• or three integrals </li> </ul> |

Transmission rate

Transmission rate of the RS232C interface.




|       | Value                                   |
|-------|---|
|       |   |
| e.g.: | ⇒ 9600 baud<br>19200 baud<br>38400 baud |

Emission

Switching the emission on and off.

Available for:

- Pirani (PSG)
- Pirani/Capacitive (PCG)
- Cold cathode (PEG)
- Cold cathode/Pirani (MPG)
- Hot cathode (BAG)
- Hot cathode/Pirani (BPG402 only)
- Capacitive (CDG)
- Hot cathode/Pirani/Capacitive (BCG)





|   | Value  |
|---|--|
|  |  |
|  | ⇒ the emission is switched on and off automatically by the gauge |
|  | ⇒ the emission is switched on and off by the user                |

Filament

Means of selection.


Available for:

- Pirani (PSG)
- Pirani/Capacitive (PCG)
- Cold cathode (PEG)
- Cold cathode/Pirani (MPG)
- Hot cathode (BAG)
- Hot cathode/Pirani (BPG402 only)
- Capacitive (CDG)
- Hot cathode/Pirani/Capacitive (BCG)

|   | Value  |
|---|--|
|  |  |
|  | ⇒ the gauge automatically alternates between the filaments |
|  | ⇒ filament 1 active  |
|  | ⇒ filament 2 active  |

### 4.6 Test Mode

The Test mode is used for displaying, editing and entering special parameter values for testing the VGC401.

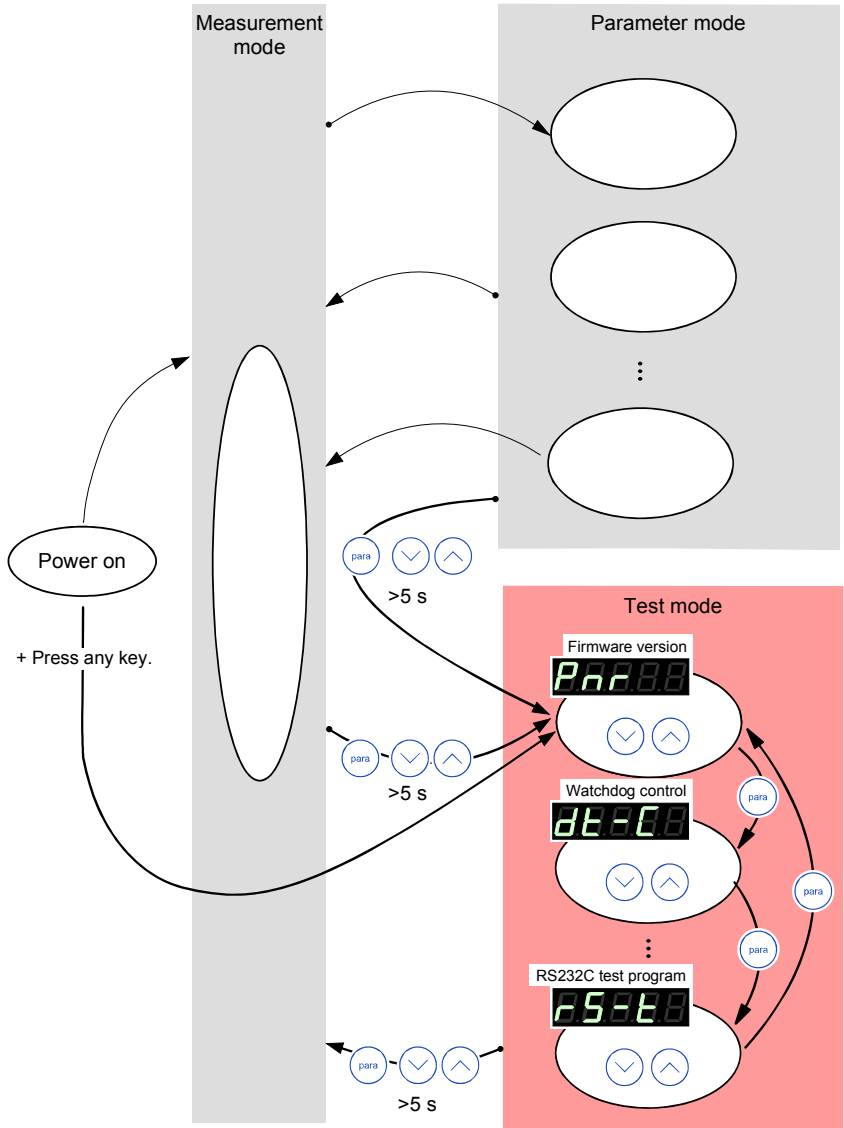


Selecting a parameter



⇒ The name of the parameter

e.g.:   
 Firmware version  
 is displayed.


→ 47      47   48

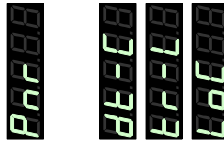

The name of the parameter is displayed as long as the key is pressed or at least for 2 s.

The firmware version is continuously displayed.

→ 48   49   49   50   50   51   51   52   52

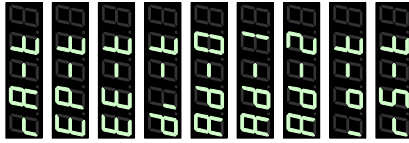


The name of the test program is displayed until it is started.

Modifying a parameter



⇒ Increase/decrease the value by the defined increments.




Starting the test program



⇒ Start test program.

Changing to the Measurement mode



Press keys >5 s  
 (→ 28)  
 or  
 turn the unit off, wait for 10 s  
 and then turn it on again.

### 4.6.1 Parameters

Firmware version

The firmware version (program version) is displayed.

|  | Version  |
|--|--|
|  | ⇒ The two parts of the firmware number are displayed alternately.  |
|  |  |
|  |  |
|  | The last character indicates the modification index (-, A ... Z). Please mention this index when contacting INFICON in the event of a fault. |




Watchdog control

Behavior of the system control (watchdog) in the event of an error.

|  | Setting  |
|--|--|
|  | ⇒ The system automatically acknowledges error messages of the watchdog after 2 s.<br>⇒ Error messages of the watchdog have to be acknowledged by the operator. |
|  |  |
|  |  |




Torr lock

The pressure unit **Torr** can be suppressed in the corresponding parameter setting **0000** (→ 40).

|   | Setting                                    |
|---|--|
|  |  |
|  | ⇒ Pressure unit <b>Torr</b> available.     |
|  | ⇒ Pressure unit <b>Torr</b> not available. |

Parameter setup lock





This parameter affects the parameter mode. When the lock is activated, the user can inspect but not modify parameter values.

|   | Setting                                    |
|---|--|
|  |  |
|  | ⇒ Parameters can be inspected and modified |
|  | ⇒ Parameters can be inspected only.        |

## 4.6.2 Test Programs

RAM test





Test of the main memory.

|   | Test sequence   |
|---|---|
|  | The test runs automatically one time:                             |
|  | ⇒ Test in process (very briefly).                                 |
|  | ⇒ Test finished, no error found.                                  |
|  | ⇒ Test finished, error(s) found.<br>The <b>FAIL</b> lamp flashes. |







## EPROM test

Test of the program memory.

|   | Test sequence   |
|---|---|
|  | The test runs automatically one time:   |
|  | ⇒ Test in process   |
|  | ⇒ Test finished, no error found. After the test, a four-digit checksum (hexadecimal format) is displayed.                               |
|  | ⇒ Test finished, error(s) found. After the test, a four-digit checksum (hexadecimal format) is displayed. The <b>FAIL</b> lamp flashes. |

## EEPROM test

Test of the parameter memory.


|   | Test sequence  |
|---|--|
|    | The test runs automatically one time:                          |
|    | ⇒ Test in process (very briefly).                              |
|   | ⇒ Test finished, no error found.                               |
|  | ⇒ Test finished, error(s) found. The <b>FAIL</b> lamp flashes. |

Display test

Test of the display.

|  | Test sequence  |
|--|--|
|  | <p>The test runs automatically one time <sup>1)</sup>:</p> <p>⇒ First, all display elements are lit at the same time, ...</p> <p>⇒ ... and then, each element is lit individually.</p> |
|  |  |
|  |  |
|  |  |

1)



⇒ Stop the test sequence and activate one element after another by pressing the key once per element.

A/D converter test 0

Test of channel 0 of the analog/digital converter (with a reference voltage at the signal input of the SENSOR connector (→ 23)).



The measurement value filter affects the applied voltage. If the signal input is open, the VGC401 displays a default value that may easily fluctuate because of the high sensitivity of the open measurement circuit.



|               | Test sequence   |
|---------------|---|
|               | <p>⇒ Positive portion of the measurement signal in Volt</p> |
| <p>e.g.: </p> |   |

## A/D converter test 1

Test of channel 1 of the analog/digital converter (with a reference voltage at the signal input of the SENSOR connector (→ 23)).



The measurement value filter affects the applied voltage. If the signal input is open, the VGC401 displays a default value that may easily fluctuate because of the high sensitivity of the open measurement circuit.




|  | Test sequence   |
|--|---|
| <br>e.g.:  | ⇒ Negative portion of the measurement signal in Volt. |

## A/D converter test 2

Test of channel 2 of the analog/digital converter (with a reference voltage at the signal input of the SENSOR connector (→ 23)).



The measurement value filter affects the applied voltage. If the signal input is open, the VGC401 displays a default value that may easily fluctuate because of the high sensitivity of the open measurement circuit.

|   | Test sequence                  |
|---|--------------------------------|
| <br>e.g.:  | ⇒ Gauge identification voltage |
|    | ⇒ No gauge connected           |

I/O test

Test of the two relays of the VGC401. The program tests their switching function.

|                |  |
|----------------|--|
| <b>Caution</b> |  |
|                | <p>Caution: The relays switch irrespective of the pressure</p> <p>Starting a test program may cause unwanted effects in connected control systems.</p> <p>Disconnect all sensor cables and control system lines to ensure that no control commands or messages are triggered by mistake.</p> |

The relays switch on and off cyclically. The switching operations are indicated optically and can be heard.

The contacts are connected to the CONTROL connector on the rear of the housing (→ 23). Check the switching function with an ohmmeter.

|  | Test sequence                         |
|--|---------------------------------------|
|  | The test runs automatically one time: |
|  | ⇒ both relays deactivated             |
|  | ⇒ switching function relay            |
|  | ⇒ switching function relay            |
|  | ⇒ error relay                         |
|  | ⇒ error relay                         |

RS232C test

Test of the RS232C interface. The VGC401 repeats each sign transmitted by the communicating HOST.


The data transferred from/to the VGC401 can be displayed by the computer only (→ Section 5).

|  | Test sequence                |
|--|------------------------------|
|  | The test runs automatically. |


## 5 Communication (Serial Interface)

### 5.1 RS232C Interface

The serial interface is used for communication between the VGC401 and a computer. A terminal can be connected for test purposes.

When the VGC401 is put into operation, it starts transmitting measured values in intervals of 1 s. As soon as the first character is transferred to the VGC401, the automatic transmission of measured values stops. After the necessary inquiries or parameter modifications have been made, the transmission of measured values can be started again with the **COM** command (→  59).

Connection diagram,  
connection cable

Pin assignment of the 9-pin D-Sub connector and RS232C cable →  25.

#### 5.1.1 Data Transmission

The data transmission is bi-directional, i.e. data and control commands can be transmitted in either direction.

Data format

1 start bit  
8 data bits  
No parity bit  
1 stop bit  
No hardware handshake

## Definitions

The following abbreviations and symbols are used:

| Symbol | Meaning  | Dec | Hex |
|--------|--|-----|-----|
| HOST   | Computer or terminal                               |     |     |
| [...]  | Optional elements                                  |     |     |
| ASCII  | American Standard Code for Information Interchange |     |     |
| <ETX>  | END OF TEXT (CTRL C)<br>Reset the interface        | 3   | 03  |
| <CR>   | CARRIAGE RETURN<br>Go to beginning of the line     | 13  | 0D  |
| <LF>   | LINE FEED<br>Advance by one line                   | 10  | 0A  |
| <ENQ>  | ENQUIRY<br>Request for data transmission           | 5   | 05  |
| <ACK>  | ACKNOWLEDGE<br>Positive report signal              | 6   | 06  |
| <NAK>  | NEGATIVE ACKNOWLEDGE<br>Negative report signal     | 21  | 15  |

"Transmit": Data transfer from HOST to VGC401

"Receive": Data transfer from VGC401 to HOST

## Format of pressure values

For pressure values, the following format is used:

$sx.xxxxEsxx$   


## Flow Control

After each ASCII string, the HOST must wait for a report signal (<ACK><CR><LF> or <NAK> <CR><LF>).

The input buffer of the HOST must have a capacity of at least 25 bytes.

### 5.1.2 Communication Protocol

#### Transmission format

Messages are transmitted to the VGC401 as ASCII strings in the form of mnemonics and parameters. All mnemonics comprise three ASCII characters.

Spaces are ignored. <ETX> (CTRL C) clears the input buffer in the VGC401.

The input is terminated by <CR> or <LF> or <CR><LF> ("end of message"), and evaluation in the VGC401 is subsequently started.

The tables starting on 57 are applicable to the mnemonics and parameters. The maximum number of digits, the data formats and admissible value ranges are also specified there.

#### Transmission protocol

| HOST                          | VGC401 | Explanation                                   |
|-------------------------------|--------|---|
| Mnemonics<br>[and parameters] | —————> | Receives message with "end of message"        |
| <CR>[<LF>]                    | —————> |   |
| <———— <ACK><CR><LF>           |        | Positive acknowledgment of a received message |

#### Reception format

When requested with a mnemonic instruction, the VGC401 transmits the measurement data or parameters as ASCII strings to the HOST.

<ENQ> must be transmitted to request the transmission of an ASCII string. Additional strings, according to the last selected mnemonic, are read out by repetitive transmission of <ENQ>.

If <ENQ> is received without a valid request, the ERROR word is transmitted.


| Reception protocol | HOST                                   | VGC401 | Explanation                                   |
|--------------------|--|--------|---|
|                    | Mnemonics<br>[and parameters] —————>   |        | Receives message with "end of message"        |
|                    | <CR>[<LF>] —————>                      |        |   |
|                    | <———— <ACK><CR><LF>                    |        | Positive acknowledgment of a received message |
|                    | <ENQ> —————>                           |        | Requests to transmit                          |
|                    | <———— Measurement values or parameters |        |   |
|                    | <———— <CR><LF>                         |        | Transmits data with "end of message"          |
|                    | :                                      | :      |   |
|                    | <ENQ> —————>                           |        | Requests to transmit                          |
|                    | <———— Measurement values or parameters |        |   |
|                    | <———— <CR><LF>                         |        | Transmits data with "end of message"          |

Error processing All strings received are verified in the VGC401. If an error is detected, a negative acknowledgment <NAK> is output. The appropriate flag is set in the ERROR word. Errors can be decoded when the ERROR word is read.

| Error recognition protocol | HOST  | VGC401 | Explanation                                   |
|----------------------------|---|--------|---|
|                            | Mnemonics<br>[and parameters] —————>          |        | Receives message with "end of message"        |
|                            | <CR>[<LF>] —————>                             |        |   |
|                            | ***** Transmission or programming error ***** |        |   |
|                            | <———— <NAK><CR><LF>                           |        | Negative acknowledgment of a received message |
|                            | Mnemonics<br>[and parameters] —————>          |        | Receives message with "end of message"        |
|                            | <CR>[<LF>] —————>                             |        |   |
|                            | <———— <ACK><CR><LF>                           |        | Positive acknowledgment of a received message |



## 5.2 Mnemonics Mnemonics

|            |  |   |
|------------|--|---|
|            |  | →  |
| <b>BAU</b> | Baud rate                                  | 65  |
| <b>COM</b> | Continuous mode                            | 59  |
| <b>COR</b> | Correction factor                          | 65  |
| <b>DCD</b> | Display control digits                     | 65  |
| <b>DGS</b> | BAG, BPG, BCG degas on/off                 | 62  |
| <b>ERR</b> | Error status                               | 61  |
| <b>EUM</b> | Emission user mode                         | 66  |
| <b>FIL</b> | Filter time constant                       | 65  |
| <b>FSR</b> | CDG full scale range                       | 63  |
| <b>FUM</b> | Filament user mode                         | 66  |
| <b>HVC</b> | HV, EMI on/off                             | 59  |
| <b>ITR</b> | BAG, BPG, HPG, BCG, CDGxxxD<br>data output | 60  |
| <b>LOC</b> | Parameter setup lock                       | 68  |
| <b>OFS</b> | Offset correction                          | 64  |
| <b>PNR</b> | Program number                             | 67  |
| <b>PR1</b> | Pressure measurement                       | 58  |
| <b>RES</b> | Reset                                      | 61  |
| <b>SAV</b> | Save parameters to EEPROM                  | 66  |
| <b>SP1</b> | Setpoint                                   | 62  |
| <b>SPS</b> | Setpoint status                            | 63  |
| <b>TAD</b> | A/D converter test                         | 69  |
| <b>TDI</b> | Display test                               | 69  |
| <b>TEE</b> | EEPROM test                                | 68  |
| <b>TEP</b> | EPROM test                                 | 68  |
| <b>TID</b> | Sensor identification                      | 60  |
| <b>TIO</b> | I/O test                                   | 70  |
| <b>TKB</b> | Keyboard test                              | 70  |
| <b>TLC</b> | Torr lock                                  | 67  |
| <b>TRA</b> | RAM test                                   | 68  |
| <b>TRS</b> | RS232 test                                 | 70  |
| <b>UNI</b> | Pressure unit                              | 64  |
| <b>WDT</b> | Watchdog control                           | 67  |

## 5.2.1 Measurement Mode

Measurement data

Transmit: **PR1** <CR>[<LF>]  
 Receive: <ACK><CR><LF>  
 Transmit: <ENQ>  
 Receive: x,sx.xxxxEsxx <CR><LF>

└─ Measurement value <sup>1)</sup>  
                                   [in current pressure unit]

└─ Status, x =  
 0 → Measurement data okay  
 1 → Underrange  
 2 → Overrange  
 3 → Sensor error  
 4 → Sensor off (BAG, PEG)  
 5 → No sensor  
 6 → Identification error  
 7 → Error BAG, BPG, HPG, BCG



<sup>1)</sup> The 3<sup>rd</sup> and 4<sup>th</sup> decimal are always 0, except for the CDG gauge.

Continuous output of  
measured values  
(RS232)

Transmit: **COM** [,x] <CR>[<LF>]  
 └ Mode x = 0 → 100 ms  
           1 → 1 s (default)  
           2 → 1 min.

Receive: <ACK><CR><LF>  
 <ACK> is immediately followed by the continuous output of the measured value in the desired interval.

Receive: x,sx.xxxxEsxx y <CR><LF>  
 └ Measured value <sup>1)</sup>  
                     with pressure unit

└ Status, x =  
 0 → Measurement data okay  
 1 → Underrange  
 2 → Overrange  
 3 → Sensor error  
 4 → Sensor off (BAG, PEG)  
 5 → No sensor  
 6 → Identification error  
 7 → Error BAG, BPG, HPG, BCG



<sup>1)</sup> The 3<sup>rd</sup> and 4<sup>th</sup> decimal are always 0, except for the CDG gauge.

Activating/deactivating  
the HV circuit and EMI

Transmit: **HVC** [,x] <CR>[<LF>]  
 └ Mode x = 0 → off (default)  
           1 → on



Receive: <ACK><CR><LF>

Transmit: <ENQ>


Receive: x <CR><LF>  
 └ Mode

Data output BAG, BPG,  
HPG, BCG, CDGxxxD

Transmit: **ITR** <CR>[<LF>]  
 Receive: <ACK><CR><LF>  
 Transmit: <ENQ>  
 Receive: xxx...xxx,y <CR><LF> <sup>1)</sup>

- └─ Gauge status ERS y  
 (→  BAG)
- └─ Transmission string (17 character)  
 (→  BAG)

xx,xx,xx,xx,xx,xx,xx,xx,xx <CR><LF> <sup>2)</sup>

- └─ Transmission string byte  
 0 ... 7 in hex format  
 (→  BPG, HPG, BCG,  
 CDGxxxD)

<sup>1)</sup> Only for BAG

<sup>2)</sup> For BPG, HPG, BCG, CDGxxxD

Gauge identification

Transmit: **TID** <CR>[<LF>]  
 Receive: <ACK><CR><LF>  
 Transmit: <ENQ>  
 Receive: x <CR><LF>

- └─ Identification, x =
  - PSG (Pirani)
  - PCG (Pirani/Capacitive)
  - PEG (Cold cathode)
  - MPG (Cold cathode/Pirani)
  - CDG (Capacitive)
  - BAG (Hot cathode)
  - BPG (Hot cathode/Pirani)
  - BPG402 (Hot cathode/Pirani)
  - HPG (Hot cathode/Pirani)
  - BCG (Hot cathode/Pirani/  
Capacitive)
  - noSEn (no Sensor)
  - noid (no identification)

## Error status

Transmit: **ERR** <CR>[<LF>]  
 Receive: <ACK><CR><LF>  
 Transmit: <ENQ>  
 Receive: xxxx <CR><LF>

└ x =

- 0000 → No error
- 1000 → Controller error  
(See display on front panel)
- 0100 → NO, HWR No hardware
- 0010 → PAR, Inadmissible parameter
- 0001 → SYN, Syntax error



The ERROR word is cancelled when read out. If the error persists, it is immediately set again.

## Reset

Transmit: **RES** [,x] <CR>[<LF>]

└ x = 1 → Reset

Receive: <ACK><CR><LF>  
 Transmit: <ENQ>  
 Receive: [x]x,[x]x,... <CR><LF>

└ List of all present error messages

xx =

- 0 → No error
- 1 → Watchdog has responded
- 2 → Task fail error
- 5 → EPROM error
- 6 → RAM error
- 7 → EEPROM error
- 9 → DISPLAY error
- 10 → A/D converter error
- 11 → Sensor error (e.g. filament rupture, no supply)
- 12 → Sensor identification error

## 5.2.2 Parameter Mode

Degas

Transmit: **DGS** [,x] <CR>[<LF>]  
 └─ x = 0 → off (default)  
       1 → on (3 min.)

Receive: <ACK><CR><LF>  
 Transmit: <ENQ>  
 Receive: x <CR><LF>  
 └─ Degas status

Threshold value  
 setting, allocation

Transmit: **SP1** [,x.xxEsx,x.xxEsx] <CR>[<LF>]  
 └─ Upper threshold <sup>1)</sup>  
       [in current pressure  
       unit]  
       (default = depending  
       on gauge)

└─ Lower threshold <sup>1)</sup>  
       [in current pressure unit]  
       (default = depending on  
       gauge)

<sup>1)</sup> Values can be entered in any format. They are internally converted into the floating point format.

Receive: <ACK><CR><LF>  
 Transmit: <ENQ>  
 Receive: x.xxxxEsxx,x.xxxxEsxx <CR><LF>  
 └─ Upper threshold  
       [in current pressure unit]

└─ Lower threshold  
       [in current pressure unit]

Switching function  
status

Transmit: **SPS** <CR>[<LF>]

Receive: <ACK><CR><LF>

Transmit: <ENQ>

Receive: x <CR><LF>

└─ Switching function x = 0 → off  
1 → on

Measurement range  
(F.S.) of capacitive  
gauges



The full scale value of the measurement range (Full Scale) of linear gauges has to be defined by the user; the full scale value of logarithmic gauges is automatically recognized.

Transmit: **FSR** [,x] <CR>[<LF>]

└─ Measurement range, x =

0 → 0.01 mbar

1 → 0.01 Torr

2 → 0.02 Torr

3 → 0.05 Torr

4 → 0.10 mbar

5 → 0.10 Torr

6 → 0.25 Torr

7 → 0.50 Torr

8 → 1 mbar

9 → 1 Torr

10 → 2 Torr

11 → 10 mbar

12 → 10 Torr

13 → 100 mbar

14 → 100 Torr

15 → 1000 mbar

16 → 1100 mbar

17 → 1000 Torr

18 → 2 bar

19 → 5 bar

20 → 10 bar

21 → 50 bar

Receive: <ACK><CR><LF>

Transmit: <ENQ>

Receive: x <CR><LF>

└─ Measurement range (F.S.)

Offset correction

Transmit: **OFS** [,x,x.xxxEsx] <CR>[<LF>]

- └─ Offset <sup>1)</sup>  
[in current pressure unit]  
(default = 0.000E0)
- └─ Mode, x =
  - 0 → Off (default)  
No offset value needs to be entered.
  - 1 → On  
If no offset value has been entered, the previously defined offset value is taken over.
  - 2 → Auto  
(offset measurement)  
No offset value needs to be entered.
  - 3 → Zero adjustment CDGxxxD  
No offset value needs to be entered.

<sup>1)</sup> Values can be entered in any format. They are internally converted into the floating point format.

Receive: <ACK><CR><LF>

Transmit: <ENQ>

Receive: x,sx.sxxxEsxx <CR><LF>

- └─ Offset  
[in current pressure unit]
- └─ Mode

Measurement unit

Transmit: **UNI** [,x] <CR>[<LF>]

- └─ x = 0 → mbar/bar (default)
- 1 → Torr
- 2 → Pascal
- 3 → Micron

Receive: <ACK><CR><LF>

Transmit: <ENQ>

Receive: x <CR><LF>

- └─ Measurement unit



|                                 |   |
|---------------------------------|---|
| Correction factor               | <p>Transmit: <b>COR</b> [, [x]x.xxx] &lt;CR&gt;[&lt;LF&gt;]</p> <p style="margin-left: 100px;">└─ 0.100 ... 10.000<br/>(default = 1.000)</p> <p>Receive: &lt;ACK&gt;&lt;CR&gt;&lt;LF&gt;</p> <p>Transmit: &lt;ENQ&gt;</p> <p>Receive: [x]x.xxx &lt;CR&gt;&lt;LF&gt;</p> <p style="margin-left: 100px;">└─ Correction factor</p> |
| Number of digits in the display | <p>Transmit: <b>DCD</b> [,x] &lt;CR&gt;[&lt;LF&gt;]</p> <p style="margin-left: 100px;">└─ x = 2 → 2 digits (default)<br/>3 → 3 digits</p> <p>Receive: &lt;ACK&gt;&lt;CR&gt;&lt;LF&gt;</p> <p>Transmit: &lt;ENQ&gt;</p> <p>Receive: x &lt;CR&gt;&lt;LF&gt;</p> <p style="margin-left: 100px;">└─ Number of digits</p>            |
| Measurement value filter        | <p>Transmit: <b>FIL</b> [,x] &lt;CR&gt;[&lt;LF&gt;]</p> <p style="margin-left: 100px;">└─ x = 0 → fast<br/>1 → medium (default)<br/>2 → slow</p> <p>Receive: &lt;ACK&gt;&lt;CR&gt;&lt;LF&gt;</p> <p>Transmit: &lt;ENQ&gt;</p> <p>Receive: x &lt;CR&gt;&lt;LF&gt;</p> <p style="margin-left: 100px;">└─ Filter time constant</p> |
| Transmission rate               | <p>Transmit: <b>BAU</b> [,x] &lt;CR&gt;[&lt;LF&gt;]</p> <p style="margin-left: 100px;">└─ x = 0 → 9600 baud (default)<br/>1 → 19200 baud<br/>2 → 38400 baud</p>   |



As soon as the new baud rate has been entered, the report signal is transmitted at the new transmission rate.

|                           |           |  |
|---------------------------|-----------|--|
|                           | Receive:  | <ACK><CR><LF>  |
|                           | Transmit: | <ENQ>  |
|                           | Receive:  | x <CR><LF>   |
|                           |           | └─ Transmission rate   |
|                           |           |  |
| Emission                  | Transmit: | <b>EUM</b> [,x] <CR>[<LF>]   |
|                           |           | └─ x = 0 → Manually<br>1 → Automatically (default)                     |
|                           | Receive:  | <ACK><CR><LF>  |
|                           | Transmit: | <ENQ>  |
|                           | Receive:  | x <CR><LF>   |
|                           |           |  |
| Filament                  | Transmit: | <b>FUM</b> [,x] <CR>[<LF>]   |
|                           |           | └─ x = 0 → Automatically (default)<br>1 → Filament 1<br>2 → Filament 2 |
|                           | Receive:  | <ACK><CR><LF>  |
|                           | Transmit: | <ENQ>  |
|                           | Receive:  | x <CR><LF>   |
|                           |           |  |
| Save parameters to EEPROM | Transmit: | <b>SAV</b> [,x] <CR>[<LF>]   |
|                           |           | └─ x = 0 → Save default parameters<br>1 → Save user parameters         |
|                           | Receive:  | <ACK><CR><LF>  |

### 5.2.3 Test Mode

(For service specialists)


#### Firmware version

Transmit: **PNR** <CR>[<LF>]

Receive: <ACK><CR><LF>


Transmit: <ENQ>

Receive: xxx-xxx-x <CR><LF>

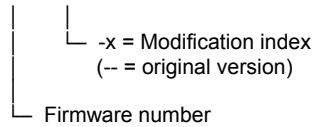

#### Watchdog control

Transmit: **WDT** [,x] <CR>[<LF>]

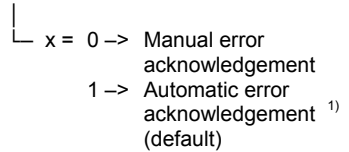



<sup>1)</sup> If the watchdog has responded, the error is automatically acknowledged and cancelled after 2 s.

Receive: <ACK><CR><LF>


Transmit: <ENQ>

Receive: x <CR><LF>



#### Torr lock


Transmit: **TLC** [,x] <CR>[<LF>]

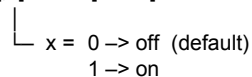


Receive: <ACK><CR><LF>

Transmit: <ENQ>

Receive: x <CR><LF>

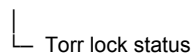

|                      |  |
|----------------------|--|
| Parameter setup lock | <p>Transmit: <b>LOC</b> [,x] &lt;CR&gt;&lt;LF&gt;</p> <div style="margin-left: 40px;">        <br/>       └─ x = 0 → off (default)<br/>             1 → on     </div> <p>Receive: &lt;ACK&gt;&lt;CR&gt;&lt;LF&gt;</p> <p>Transmit: &lt;ENQ&gt;</p> <p>Receive: x &lt;CR&gt;&lt;LF&gt;</p> <div style="margin-left: 40px;">        <br/>       └─ Parameter setup lock status     </div>  |
| RAM test             | <p>Transmit: <b>TRA</b> &lt;CR&gt;&lt;LF&gt;</p> <p>Receive: &lt;ACK&gt;&lt;CR&gt;&lt;LF&gt;</p> <p>Transmit: &lt;ENQ&gt; Starts the test (duration &lt;1 s)</p> <p>Receive: xxxx &lt;CR&gt;&lt;LF&gt;</p> <div style="margin-left: 40px;">        <br/>       └─ ERROR word     </div>  |
| EPROM test           | <p>Transmit: <b>TEP</b> &lt;CR&gt;&lt;LF&gt;</p> <p>Receive: &lt;ACK&gt;&lt;CR&gt;&lt;LF&gt;</p> <p>Transmit: &lt;ENQ&gt; Starts the test (duration ≈10 s)</p> <p>Receive: xxxx,xxxx &lt;CR&gt;&lt;LF&gt;</p> <div style="margin-left: 40px;">        <br/>       └─ Check sum (hex)     </div> <div style="margin-left: 40px;">        <br/>       └─ ERROR word     </div>   |
| EEPROM test          | <p>Transmit: <b>TEE</b> &lt;CR&gt;&lt;LF&gt;</p> <p>Receive: &lt;ACK&gt;&lt;CR&gt;&lt;LF&gt;</p> <p>Transmit: &lt;ENQ&gt; Starts the test (duration &lt;1 s)</p> <p> Do not keep repeating the test (EEPROM life).</p> <p>Receive: xxxx &lt;CR&gt;&lt;LF&gt;</p> <div style="margin-left: 40px;">        <br/>       └─ ERROR word     </div> |

Display test

Transmit: **TDI** [,x] <CR><LF>

└ x = 0 → Stops the test – display according to current operating mode (default)  
 1 → Starts the test – all LEDs on

Receive: <ACK><CR><LF>

Transmit: <ENQ>

Receive: x <CR><LF>

└ Display test status

ADC test

Transmit: **TAD** <CR><LF>

Receive: <ACK><CR><LF>

Transmit: <ENQ>

Receive: [x]x.xxxx, x.xxxx, x.xxxx <CR><LF>

└ ADC channel 2  
 Gauge identification  
 [0.0000 ... 5.0000 V]  
 └ ADC channel 1  
 Measurement signal (negative portion)  
 [0.0000 ... 5.0000 V]  
 └ ADC channel 0  
 Measurement signal (positive portion) [0.0000 ... 11.0000 V]

I/O test

Transmit: **TIO** [,x] <CR>[<LF>]

└─ x =

- 0 → Stops the test (default)
- 1 → Setpoint relay off, error relay off
- 2 → Setpoint relay on, error relay off
- 3 → Setpoint relay off, error relay on
- 4 → Setpoint relay on, error relay on

Receive: <ACK><CR><LF>

Transmit: <ENQ>

Receive: x <CR><LF>

└─ I/O test status


Operator key test


Transmit: **TKB** <CR>[<LF>]


Receive: <ACK><CR><LF>

Transmit: <ENQ>

Receive: xxx <CR><LF>

└─┬─ Key 3  x = 0 → Not pushed  
    └─ 1 → Pushed

└─┬─ Key 2 

└─┬─ Key 1 

RS232 test

Transmit: **TRS** <CR>[<LF>]

Receive: <ACK><CR><LF>

Transmit: <ENQ> Starts the test (repeats each character, test is interrupted with <CTRL> C).

## 5.2.4 Example



"Transmit (T)" and "Receive (R)" are related to the host.


|  |   |
|--|---|
| T: <b>TID</b> <CR> [<LF>]                  | Request for gauge identification                                  |
| R: <ACK> <CR> <LF>                         | Positive acknowledgement  |
| T: <ENQ>                                   | Request for data transmission                                     |
| R: PSG <CR> <LF>                           | Gauge identification  |
| T: <b>SP1</b> <CR> [<LF>]                  | Request for parameters of switching function (setpoint)           |
| R: <ACK> <CR> <LF>                         | Positive acknowledgement  |
| T: <ENQ>                                   | Request for data transmission                                     |
| R: 1.0000E-09,9.0000E-07 <CR> <LF>         | Thresholds  |
| T: <b>SP1</b> ,6.80E-3,9.80E-3 <CR> [<LF>] | Modification of threshold values of switching function (setpoint) |
| R: <ACK> <CR> <LF>                         | Positive acknowledgement  |
| T: <b>FOL</b> ,2 <CR> [<LF>]               | Modification of filter time constant (syntax error)               |
| R: <NAK> <CR> <LF>                         | Negative acknowledgement  |
| T: <ENQ>                                   | Request for data transmission                                     |
| R: 0001 <CR> <LF>                          | ERROR word  |
| T: <b>FIL</b> ,2 <CR> [<LF>]               | Modification of filter time constant                              |
| R: <ACK> <CR> <LF>                         | Positive acknowledgement  |
| T: <ENQ>                                   | Request for data transmission                                     |
| R: 2 <CR> <LF>                             | Filter time constant  |
| T: <b>PR1</b> <CR> [<LF>]                  | Request for measurement data                                      |
| R: <ACK> <CR> <LF>                         | Positive acknowledgement  |
| T: <ENQ>                                   | Request for data transmission                                     |
| R: 0,8.3400E-03 <CR> <LF>                  | Status and pressure   |
| T: <ENQ>                                   | Request for data transmission                                     |
| R: 1,8.0000E-04 <CR> <LF>                  | Status and pressure   |

## 6 Maintenance

The product requires no maintenance.

### Cleaning the VGC401


For cleaning the outside of the VGC401, a slightly moist cloth will usually do. Do not use any aggressive or scouring cleaning agents.

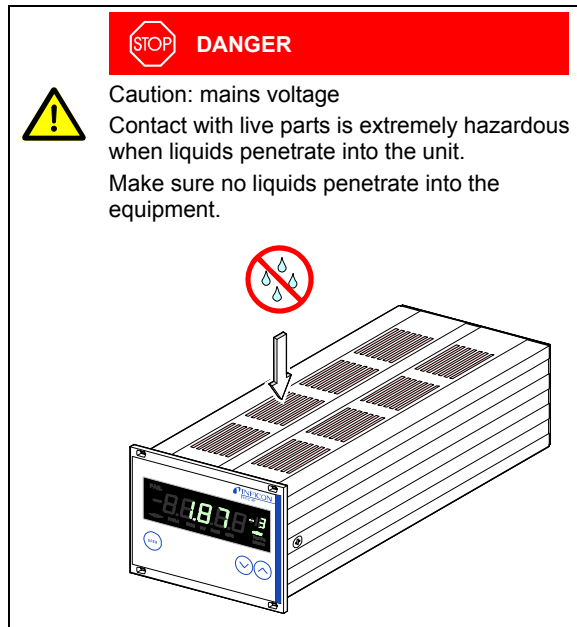











## 7 Troubleshooting



Signalization of errors









**FAIL**  and the error relay opens (→ ¶ 24).





Error messages

|   | Possible cause and remedy/<br>acknowledgement  |
|---|--|
|    | Parameter setup lock activated<br>(→ ¶ 48).  |
|    | Possible cause and remedy/<br>acknowledgement<br><br>Interruption or instability in sensor line<br>or connector (Sensor error).<br><br>⇒ Acknowledge with the  key.<br>If the problem persists, <b>noSEn</b> or<br><b>noPd</b> is displayed |
|    | Possible cause and remedy/<br>acknowledgement<br><br>Error messages concerning BPG, BAG<br>and HPG.<br>Meaning → ¶ [6], [7], [8], [13].<br>0 = no communication to the gauge<br>1...9 = High-Byte of Error-Byte<br>(BPG400, HPG)<br>1...6 = Error status (BAG)   |
|  | Possible cause and remedy/<br>acknowledgement<br><br>Error messages concerning BCG and<br>BPG402.<br>Meaning → ¶ [14], [20].<br>xx = Error byte (HEX)  |

|   | Possible cause and remedy/<br>acknowledgement   |
|---|---|
|  | The VGC401 has been turned on too fast after power off.<br>⇒ Acknowledge with the  key <sup>1)</sup> .   |
|   | The watchdog has tripped because of a severe electric disturbance or an operating system error.<br>⇒ Acknowledge with the  key <sup>1)</sup> . |

- <sup>1)</sup> If the watchdog is set to  , the VGC401 acknowledges the message automatically after 2 s (→  47).

|   |   |
|---|---|
|   | Possible cause and remedy/<br>acknowledgement   |
|    | Main memory (RAM) error.<br>⇒ Acknowledge with the  key.           |
|   | Possible cause and remedy/<br>acknowledgement   |
|    | Program memory (EPROM) error.<br>⇒ Acknowledge with the  key.      |
|   | Possible cause and remedy/<br>acknowledgement   |
|  | Parameter memory (EEPROM) error.<br>⇒ Acknowledge with the  key. |
|   | Possible cause and remedy/<br>acknowledgement   |
|  | Display driver error.<br>⇒ Acknowledge with the  key.            |

|   |  |
|---|--|
|   | Possible cause and remedy/<br>acknowledgement  |
|  | A/D converter error.<br>⇒ Acknowledge with the  key.                |
|   | Possible cause and remedy/<br>acknowledgement  |
|  | Operating system (Task Fail) error.<br>⇒ Acknowledge with the  key. |

Technical support



If the problem persists after the message has been acknowledged for several times and/or the gauge has been exchanged, please contact your local INFICON service center.

## 8 Repair

Return defective products to your local INFICON service center for repair.

INFICON assumes no liability and the warranty becomes null and void if repair work is carried out by the end-user or third parties.

## 9 Accessories

|  | Ordering number |
|--|-----------------|
| Adapter panel for installation into a 19" rack chassis adapter, height 3 U | 398-499         |

## 10 Storage



### Caution



Caution: electronic component  
Inappropriate storage (static electricity, humidity etc.) can damage electronic components.

Store the product in a bag or container. Observe the corresponding specifications in the technical data (→ 8).

## 11 Disposal



### WARNING



Caution: substances detrimental to the environment

Products or parts thereof (mechanical and electric components, operating fluids etc.) can be detrimental to the environment.

Dispose of such substances in accordance with the relevant local regulations.

Separating the components

Non-electronic components

Electronic components

After disassembling the product, separate its components according to the following criteria:

Such components must be separated according to their materials and recycled.

Such components must be separated according to their materials and recycled.

## Appendix

### A: Conversion Tables

#### Weights

|      | kg                      | lb                    | slug                    | oz      |
|------|-------------------------|-----------------------|-------------------------|---------|
| kg   | 1                       | 2.205                 | $68.522 \times 10^{-3}$ | 35.274  |
| lb   | 0.454                   | 1                     | $31.081 \times 10^{-3}$ | 16      |
| slug | 14.594                  | 32.174                | 1                       | 514.785 |
| oz   | $28.349 \times 10^{-3}$ | $62.5 \times 10^{-3}$ | $1.943 \times 10^{-3}$  | 1       |

#### Pressures

|                       | N/m <sup>2</sup> , Pa | bar                    | mbar                | Torr                     | at                     |
|-----------------------|-----------------------|------------------------|---------------------|--------------------------|------------------------|
| N/m <sup>2</sup> , Pa | 1                     | $10 \times 10^{-6}$    | $10 \times 10^{-3}$ | $7.5 \times 10^{-3}$     | $9.869 \times 10^{-6}$ |
| bar                   | $100 \times 10^3$     | 1                      | $10^3$              | 750.062                  | 0.987                  |
| mbar                  | 100                   | $10^{-3}$              | 1                   | $750.062 \times 10^{-3}$ | $0.987 \times 10^{-3}$ |
| Torr                  | 133.322               | $1.333 \times 10^{-3}$ | 1.333               | 1                        | $1.316 \times 10^{-3}$ |
| at                    | $101.325 \times 10^3$ | 1.013                  | $1.013 \times 10^3$ | 760                      | 1                      |

#### Pressure units used in the vacuum technology

|        | mbar                  | Pascal              | Torr                     | mmWs   | psi                     |
|--------|-----------------------|---------------------|--------------------------|--------|-------------------------|
| mbar   | 1                     | 100                 | $750.062 \times 10^{-3}$ | 10.2   | $14.504 \times 10^{-3}$ |
| Pascal | $10 \times 10^{-3}$   | 1                   | $7.5 \times 10^{-3}$     | 0.102  | $0.145 \times 10^{-3}$  |
| Torr   | 1.333                 | 133.322             | 1                        | 13.595 | $19.337 \times 10^{-3}$ |
| mmWs   | $9.81 \times 10^{-2}$ | 9.81                | $7.356 \times 10^{-2}$   | 1      | $1.422 \times 10^{-3}$  |
| psi    | 68.948                | $6.895 \times 10^3$ | 51.715                   | 703    | 1                       |


#### Linear measures

















|      | mm     | m                     | inch                   | ft                     |
|------|--------|-----------------------|------------------------|------------------------|
| mm   | 1      | $10^{-3}$             | $39.37 \times 10^{-3}$ | $3.281 \times 10^{-3}$ |
| m    | $10^3$ | 1                     | 39.37                  | 3.281                  |
| inch | 25.4   | $25.4 \times 10^{-3}$ | 1                      | $8.333 \times 10^{-2}$ |
| ft   | 304.8  | 0.305                 | 12                     | 1                      |

#### Temperature

|            | Kelvin                         | Celsius                                  | Fahrenheit                               |
|------------|--------------------------------|--|--|
| Kelvin     | 1                              | $^{\circ}\text{C} + 273.15$              | $(^{\circ}\text{F} + 459.67) \times 5/9$ |
| Celsius    | K-273.15                       | 1  | $5/9 \times ^{\circ}\text{F} - 17.778$   |
| Fahrenheit | $9/5 \times \text{K} - 459.67$ | $9/5 \times (^{\circ}\text{C} + 17.778)$ | 1  |

## B: Default Parameters

The following values are activated when the default parameters are loaded (→  33):

|  | Default                 | User |  |
|--|-------------------------|------|--|
|   | oFF                     |      |  |
|   | $5 \times 10^{-4}$ mbar |      |  |
|   | $1 \times 10^3$ mbar    |      |  |
|   | 1000 Torr               |      |  |
|   | oFF                     |      |  |
|   | mbar                    |      |  |
|   | 1.00                    |      |  |
|   | nor                     |      |  |
|   | oFF                     |      |  |
|   | 2 digits                |      |  |
|   | 9600                    |      |  |
|   | Auto                    |      |  |
|   | oFF                     |      |  |
|   | oFF                     |      |  |
|   | Auto                    |      |  |
|  | Auto                    |      |  |

## C: Firmware Update




If your VGC401 firmware needs updating, e.g. for implementing a new gauge type, please download it from our website ([www.inficon.com](http://www.inficon.com)) or contact your local INFICON service center.

### User parameters


Most of the settings you may have defined in the Parameter and Test mode will not be affected by a firmware update. To be sure, note your parameter settings before upgrading the firmware (→ [78](#)).

### Preparing the VGC401 for a program transfer

- ❶ Turn the VGC401 off
- ❷ Connect the VGC401 with the serial COM1 (COM2) interface of your PC via a 9-pole D-Sub extension cable (the firmware of the VGC401 cannot be loaded from a Mac).

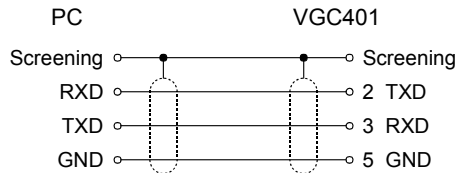

- ❸ With a pin ( $\varnothing < 2$  mm) depress the switch behind the rear panel and turn the VGC401 on.

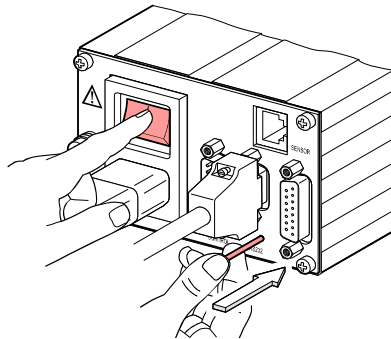


After power on, the display remains dark.

## Program transfer


In the following instructions, the index -n is used instead of the actual index.

- 1 Unpack the self extracting file \*.exe or the packed file \*.zip.



- 2 If you have not connected the VGC401 to the COM1 interface:

Open the batch file  ...

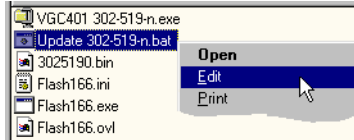


... edit the interface ...



... and save the new setting.

- 3 Start batch file .

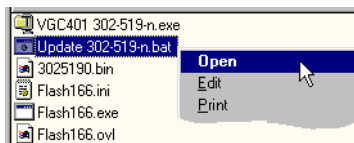

⇒ The new firmware is transmitted to the VGC401.



```

Brendel - UPDATE 302519n
D:\VGC401\0\Update>FLASH166 /P 302519n.BIN /COM1
FLASH166 --- Utility for 80C166, C16x and ST10 using bootstrap
Copyright (C) FS FORTH-SYSTEME GmbH, Breisach
Version 3.03 of 06/14/2000, limited OEM Version (21279)

Loading bootstrap code (32 Bytes)
Loading target monitor (262 Bytes)
Target monitor located to 00FA40H
Infineon C161PI
CPU clock = 24.115.200 MHz
Configuration loaded from file FLASH166.INI
Target: VGC401, INFICON

wSI PSD813FX-A/913FX detected
Loading Flash algorithm (138 Bytes)
Erasing Flash-EPROM BBlock #:0 1 2 3 4 5 6 7
Programming File 302519n.BIN (131072 Bytes)
131072 Bytes programmed
programming ok

Erase Time      : 9.5 sec
Programming Time: 32.0 sec


```

Starting the VGC401 with the updated firmware




If the program transfer was successful, quit the Update mode by turning the VGC401 off.

















Wait at least 10 s before turning the VGC401 on again in order for it to correctly initialize itself.

- ✓ The VGC401 is now ready for operation. To be sure, check that the current parameter settings are identical with the previously defined settings (→  78).

## D: Literature

-  [1] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Pirani Standard Gauge PSG400, PSG400-S tina04e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [2] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Compact Pirani Gauge PSG500, PSG500-S tina44e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [3] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Compact Pirani Gauge PSG502, PSG502-S tina45e1  
INFICON AG, LI-9496 Balzers, Liechtenstein

-  [4] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Pirani Standard Gauge PSG100-S, PSG101-S  
tina17e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [5] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Penning Gauge PEG100  
tina14e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [6] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Bayard-Alpert Pirani Gauge BPG400  
tina03e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [7] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Bayard-Alpert Gauge BAG100-S  
tina06e1  
Inficon AG, LI-9496 Balzers, Liechtenstein
-  [8] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Bayard-Alpert Gauge BAG101-S  
tina11e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [9] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Capacitance Diaphragm Gauge CDG025  
tina01e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [10] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Capacitance Diaphragm Gauge  
CDG045, CDG045-H  
tina07e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [11] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Capacitance Diaphragm Gauge CDG100  
tina08e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [12] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Pirani Capacitance Diaphragm Gauge  
PCG400, PCG400-S  
tina28e1  
INFICON AG, LI-9496 Balzers, Liechtenstein

-  [13] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
High Pressure / Pirani Gauge  
HPG400  
tina31e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [14] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
TripleGauge™ BCG450  
tina40e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [15] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Inverted Magnetron Pirani Gauge  
MPG400, MPG401  
tina48e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [16] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Bayard-Alpert Pirani Gauge BPG402  
tina46e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [17] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Capacitance Diaphragm Gauge CDG025D  
tina49e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [18] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Capacitance Diaphragm Gauge CDG045D  
tina51e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [19] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Capacitance Diaphragm Gauge CDG100D  
tina52e1  
INFICON AG, LI-9496 Balzers, Liechtenstein
-  [20] [www.inficon.com](http://www.inficon.com)  
Operating Manual  
Capacitance Diaphragm Gauge CDG160D  
tina53e1  
INFICON AG, LI-9496 Balzers, Liechtenstein

## E: Index

|                          |       |                             |                   |
|--------------------------|-------|-----------------------------|-------------------|
| A/D converter test       | 50    | Gauges                      | 8                 |
| Accessories              | 75    | General parameters          |                   |
| Baud rate                | 43    | display resolution          | 43                |
| Calibration factor       |       | pressure units              | 40                |
| → Correction factor      |       | I/O test                    | 52                |
| Cleaning                 | 72    | Identification of the gauge | 30                |
| Communication            |       | Installation                | 13                |
| Example                  | 71    | Interface                   | → RS232C          |
| Mnemonics                | 57    | Literature                  | 81                |
| RS232C-                  | 53    | Mains power connector       | 20                |
| Connectors               |       | Maintenance                 | 72                |
| CONTROL                  | 23    | Measurement mode            |                   |
| mains power              | 20    | displaying the gauge        |                   |
| RS232                    | 25    | identification              | 30                |
| SENSOR                   | 22    | status messages             | 29                |
| Contact positions        | 24    | turning the gauge on/off    | 29                |
| Contents                 | 4     | Measurement range           | 37                |
| CONTROL connector        | 23    | Measurement units           |                   |
| Conversion               | 77    | → Pressure units            |                   |
| Correction factor        | 40    | Measurement value filter    | 41                |
| Default parameters       | 78    | Mnemonics                   | → Communication   |
| Loading                  | 33    | Mode                        | → Operating modes |
| Default settings         | 78    | Offset                      | 38                |
| Degas                    | 34    | Operating modes             |                   |
| Display                  |       | Measurement mode            | 28                |
| resolution               | 43    | overview                    | 27                |
| Display test             | 50    | Parameter mode              | 31                |
| Disposal                 | 76    | Program transfer mode       | 79                |
| EEPROM                   | 49    | Test mode                   | 45                |
| Emission on/off          | 44    | Operation                   |                   |
| EPROM test               | 49    | power off                   | 27                |
| Error messages           | 73    | power on                    | 27                |
| Factory settings         | 78    | Parameter mode              | 31                |
| Filament                 | 44    | correction factor           | 40                |
| Filter                   | 41    | degas                       | 34                |
| Firmware                 |       | display resolution          | 43                |
| update                   | 79    | measurement range           | 37                |
| version                  | 2, 47 | measurement value filter    | 41                |
| Front panel              | 26    | offset                      | 38                |
| display                  | 26    | pressure units              | 40                |
| operator keys            | 26    | switching thresholds        | 34                |
| Full Scale               |       | transmission rate           | 43                |
| → Measurement range      |       | turning the gauge on/off    | 42                |
| Gauge                    |       | Parameter Mode              |                   |
| activation/deactivation  | 42    | Emission on/off             | 44                |
| identification           | 30    | Filament                    | 44                |
| Gauge connector          | 22    | Parameter setup lock        | 48                |
| Gauge parameters         |       |                             |                   |
| measurement value filter | 41    |                             |                   |

|                          |                  |
|--------------------------|------------------|
| Pin assignment           |                  |
| CONTROL                  | 24               |
| RS232                    | 25               |
| SENSOR                   | 23               |
| Power connector          | 20               |
| Power off                | 27               |
| Power on                 | 27               |
| Pressure units           | 40               |
| Program                  | → Firmware       |
| RAM test                 | 48               |
| Repair                   | 75               |
| RS232C                   |                  |
| interface connector      | 25               |
| Serial interface         | 25               |
| Technical data           | 11               |
| Test                     | 52               |
| Safety                   | 6                |
| Scope of Delivery        | 3                |
| SENSOR connector         | 22               |
| Serial interface         | → RS232C         |
| Status messages          | 29               |
| Storage                  | 76               |
| Switching function       | 34               |
| Symbols                  | 6                |
| Technical data           | 8                |
| Test                     | 49               |
| Test mode                |                  |
| A/D converter test       | 50               |
| Display test             | 50               |
| EPROM test               | 49               |
| Firmware version         | 47               |
| I/O test                 | 52               |
| parameter setup lock     | 48               |
| RAM test                 | 48               |
| RS232C test              | 52               |
| Torr lock                | 48               |
| Watchdog                 | 47               |
| Thresholds               | 34               |
| Torr lock                | 48               |
| Transmission rate        | 43               |
| Troubleshooting          | 73               |
| Turning the gauge on/off | 29               |
| Units                    | → Pressure units |
| Update                   | 79               |
| Warranty                 | 7                |
| Watchdog                 | 47               |

## Declaration of Conformity



We, INFICON, hereby declare that the equipment mentioned below complies with the provisions of the Directive relating to electrical equipment designed for use within certain voltage limits 73/23/EEC and the Directive relating to electromagnetic compatibility 89/336/EEC.

Product

Single-Channel Controller  
VGC401

Part number

398-010

Standards

Harmonized and international/national standards and specifications:

- EN 61010-1 (Safety requirements for electrical equipment for measurement, control and laboratory use)
- EN 50081-1 (Electromagnetic compatibility generic emission standard)
- EN 50082-2 (Electromagnetic compatibility generic immunity standard)

Signatures


INFICON AG, Balzers

18 June 2003



Remo Klaiber  
Product Marketing  
Management

16 June 2003

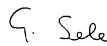

Dr. Georg Sele  
Techn. Support Manager  
Quality Representative

## Notes



*LI-9496 Balzers  
Liechtenstein  
Tel +423 / 388 3111  
Fax +423 / 388 3700  
reachus@inficon.com*

*Original: German tinb01d1-d (2007-10)*



11 nb01e1-d

[www.inficon.com](http://www.inficon.com)